


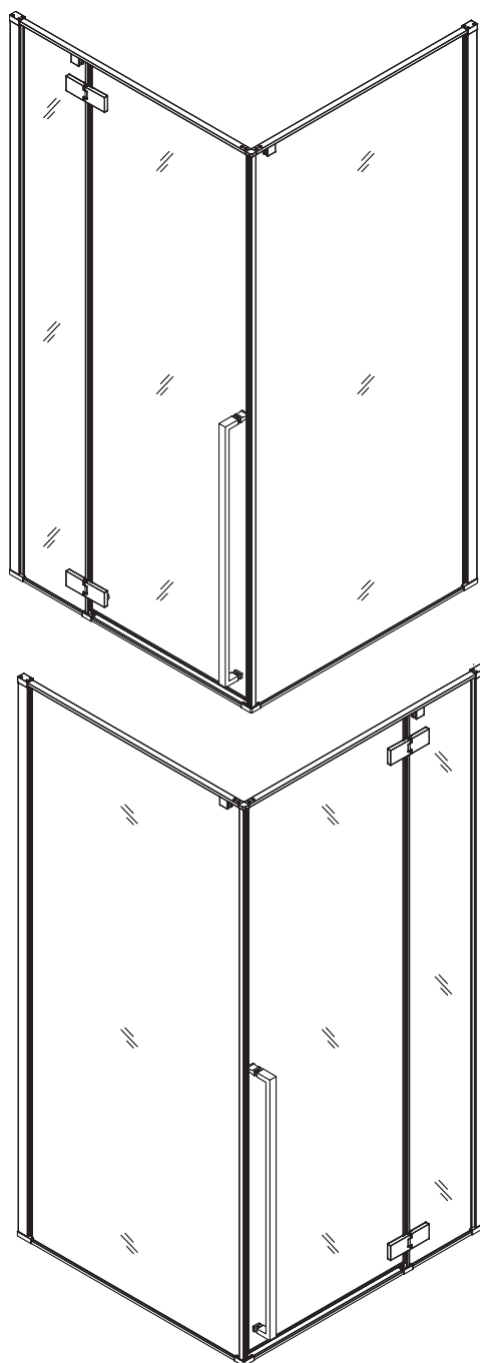


INSTRUCTIUNI DE MONTAJ

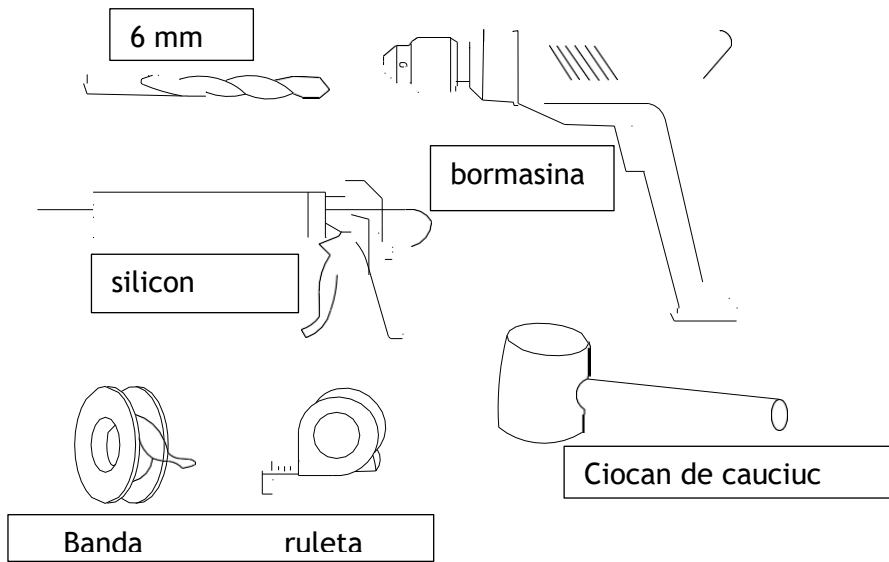


CABINĂ DE DUȘ
FARGO




























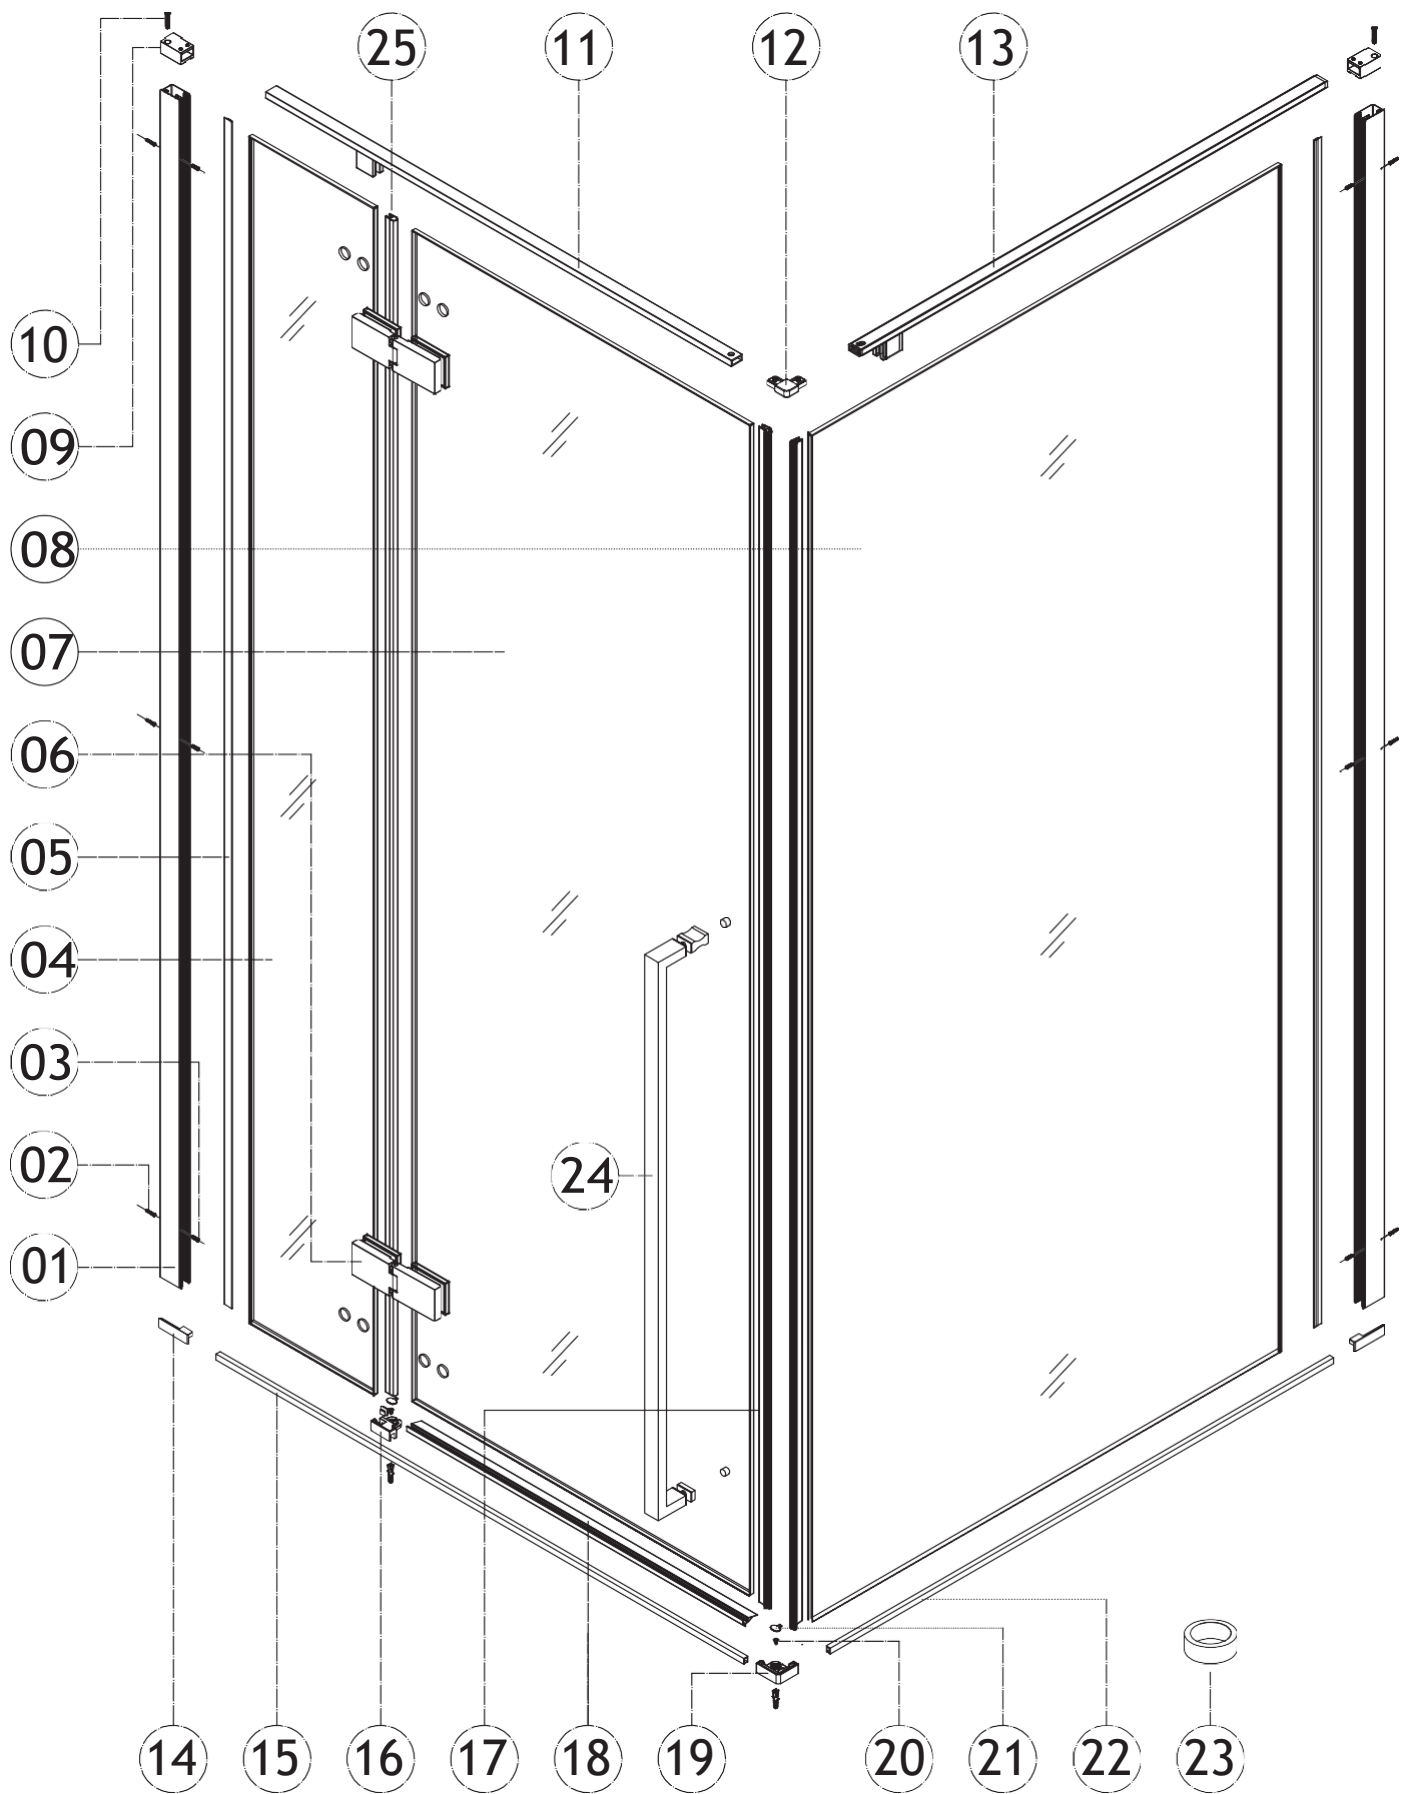



Necesare Instrumente


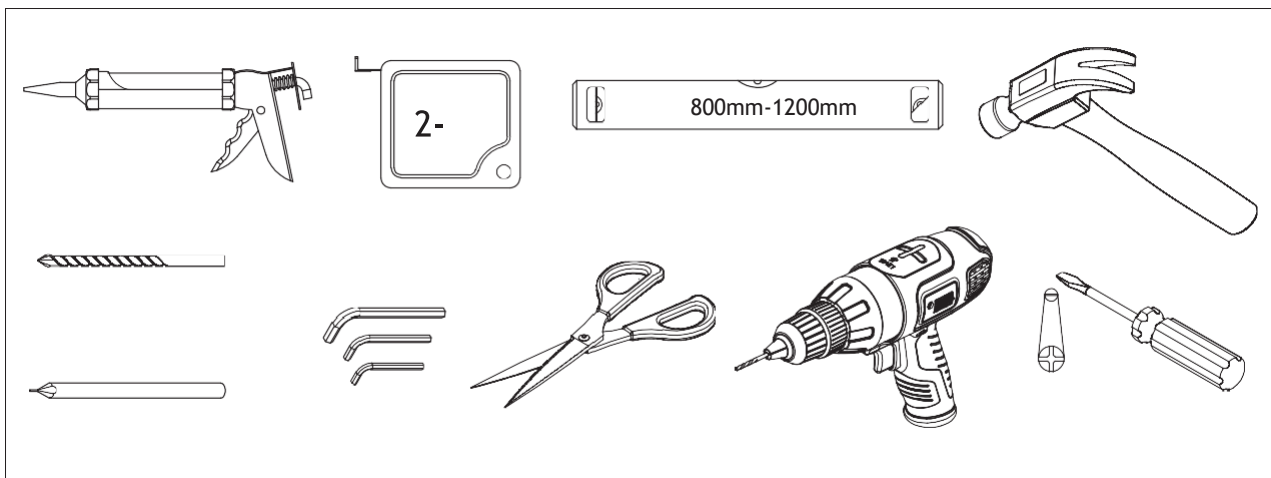



Toate piesele

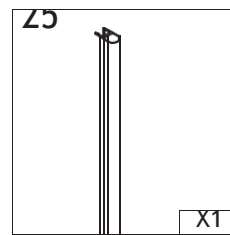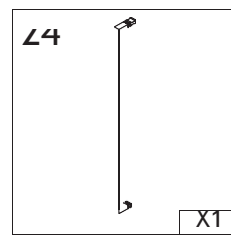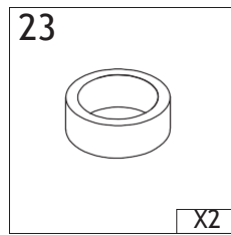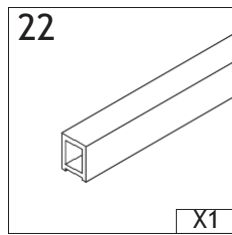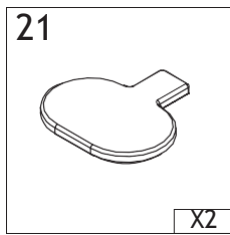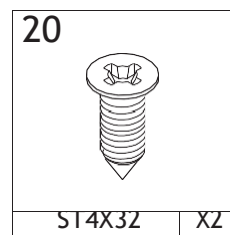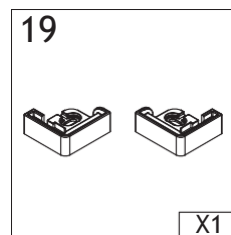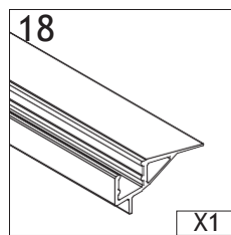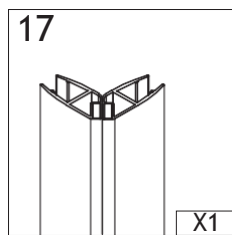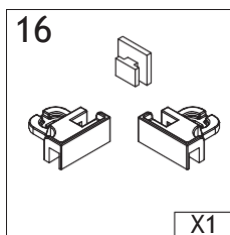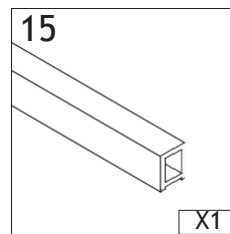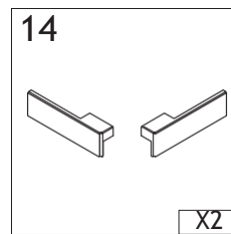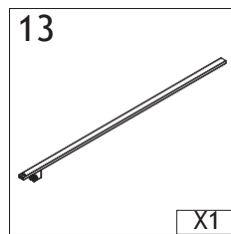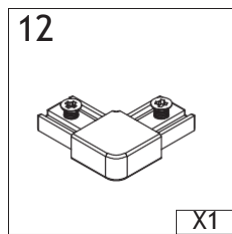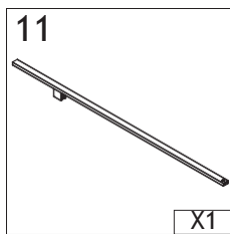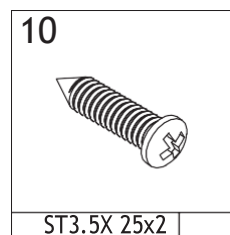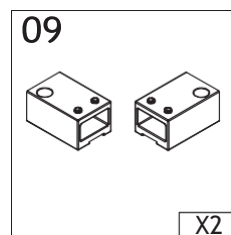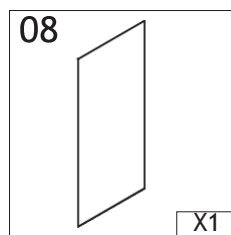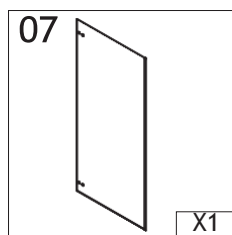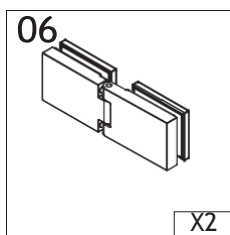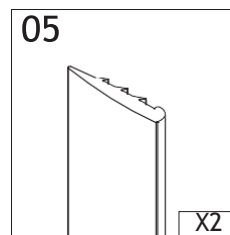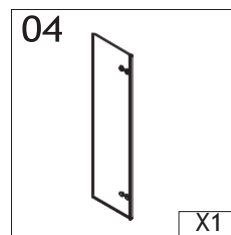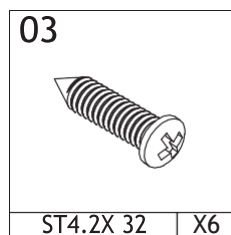
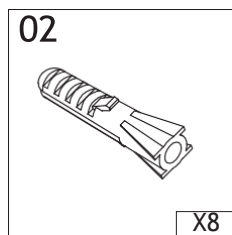
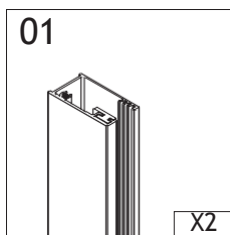


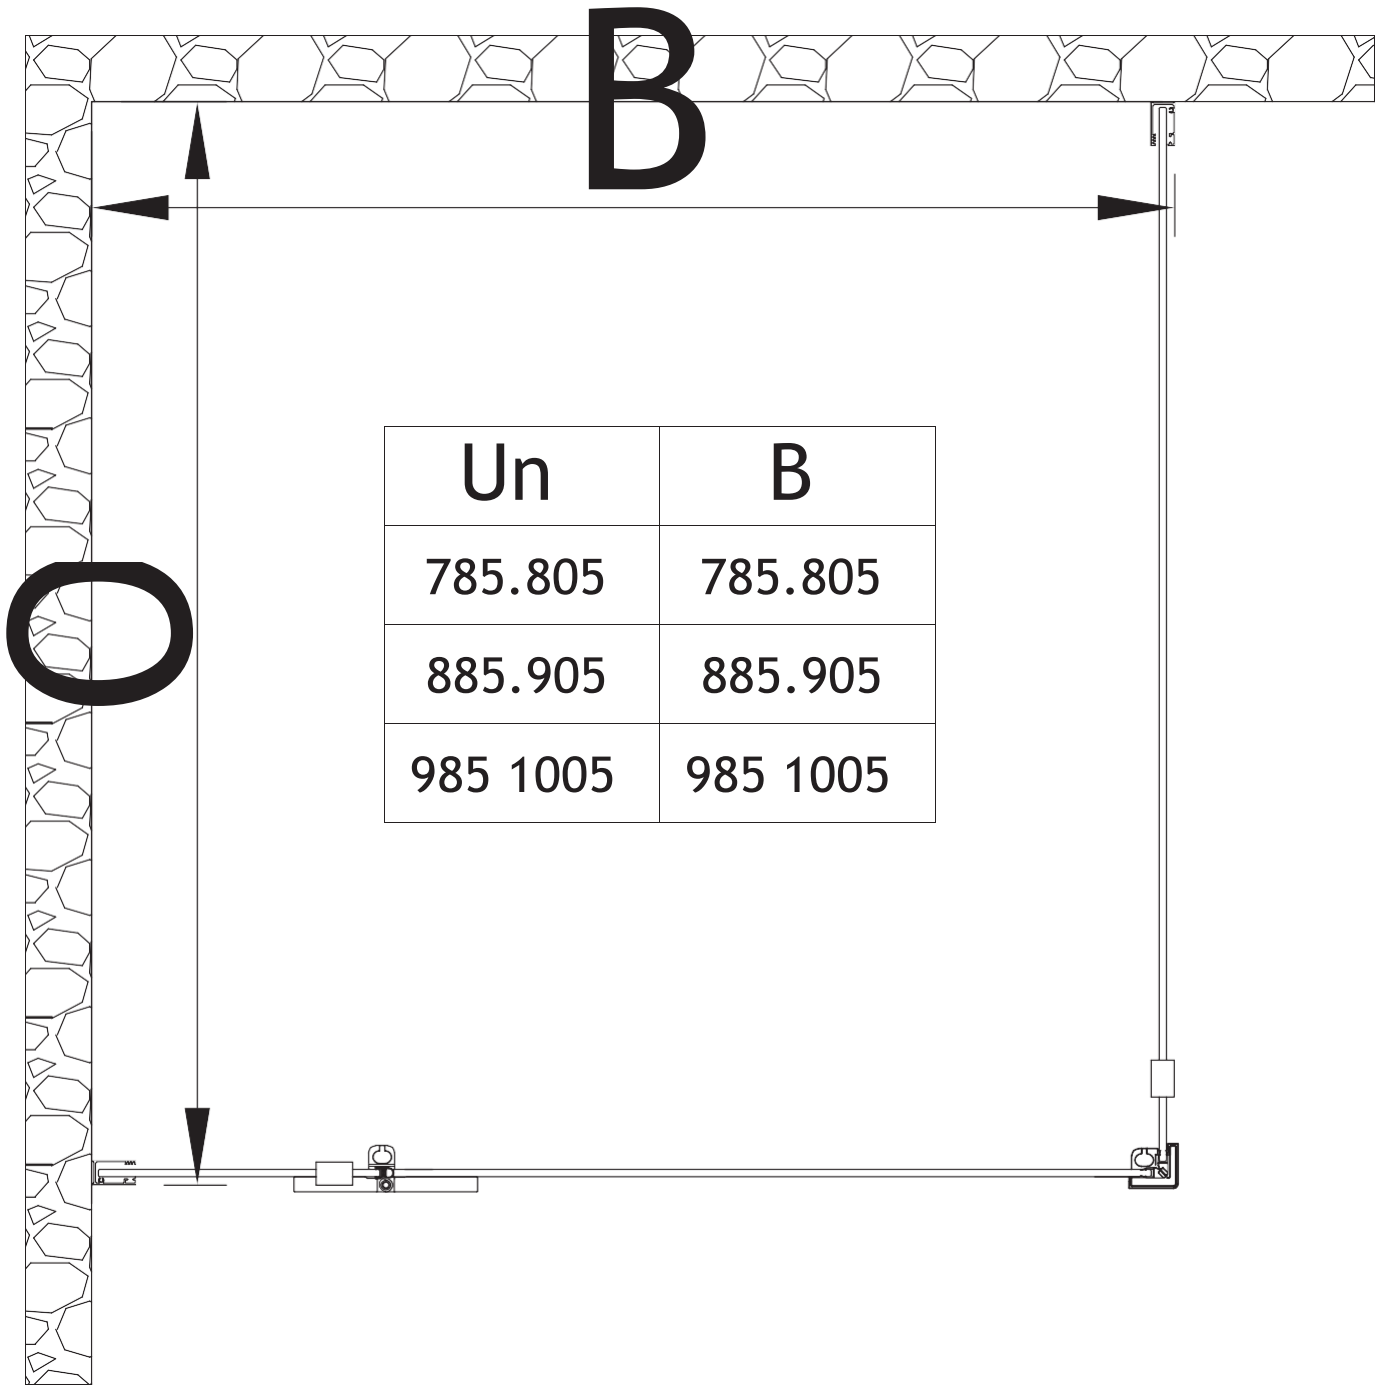




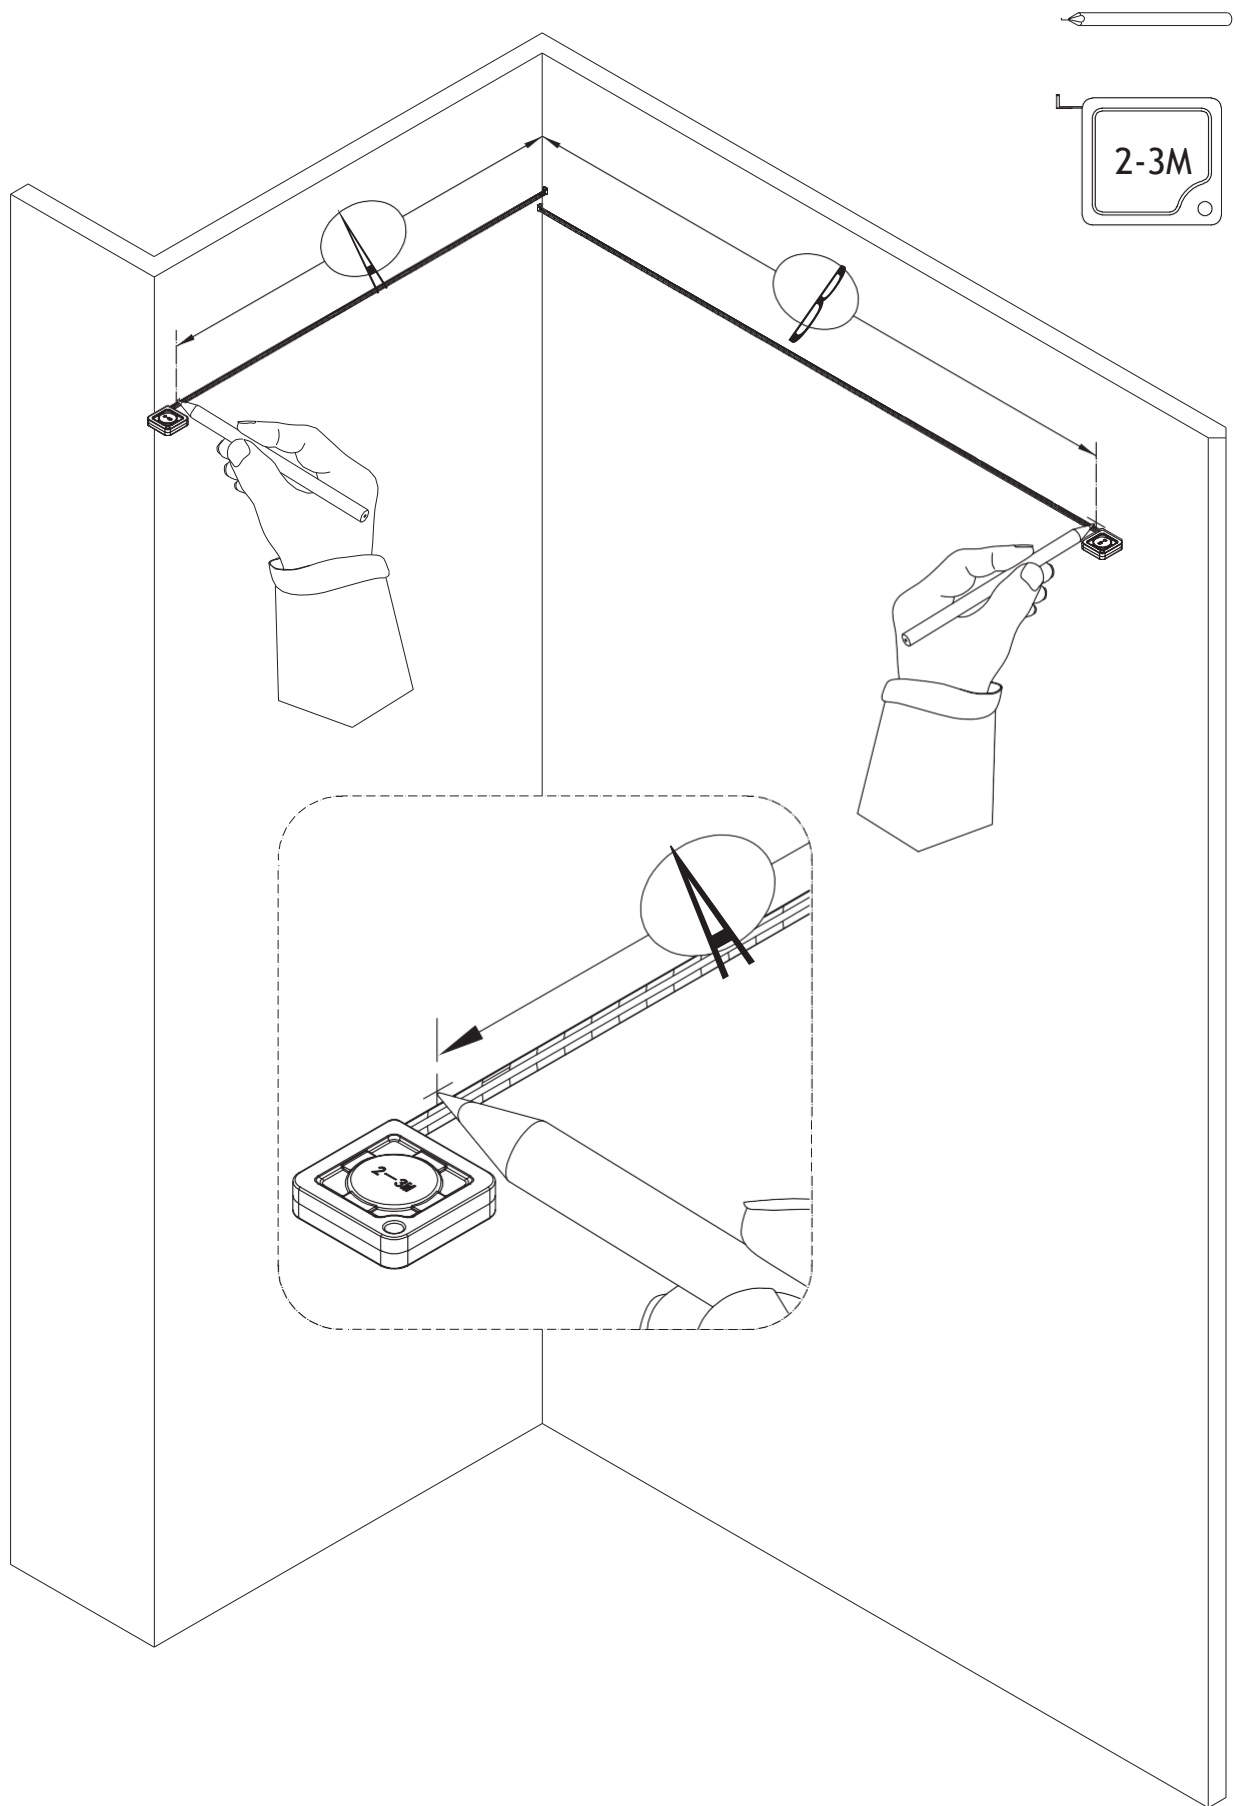




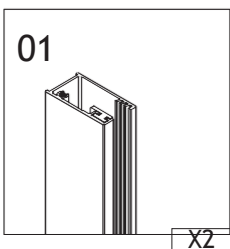
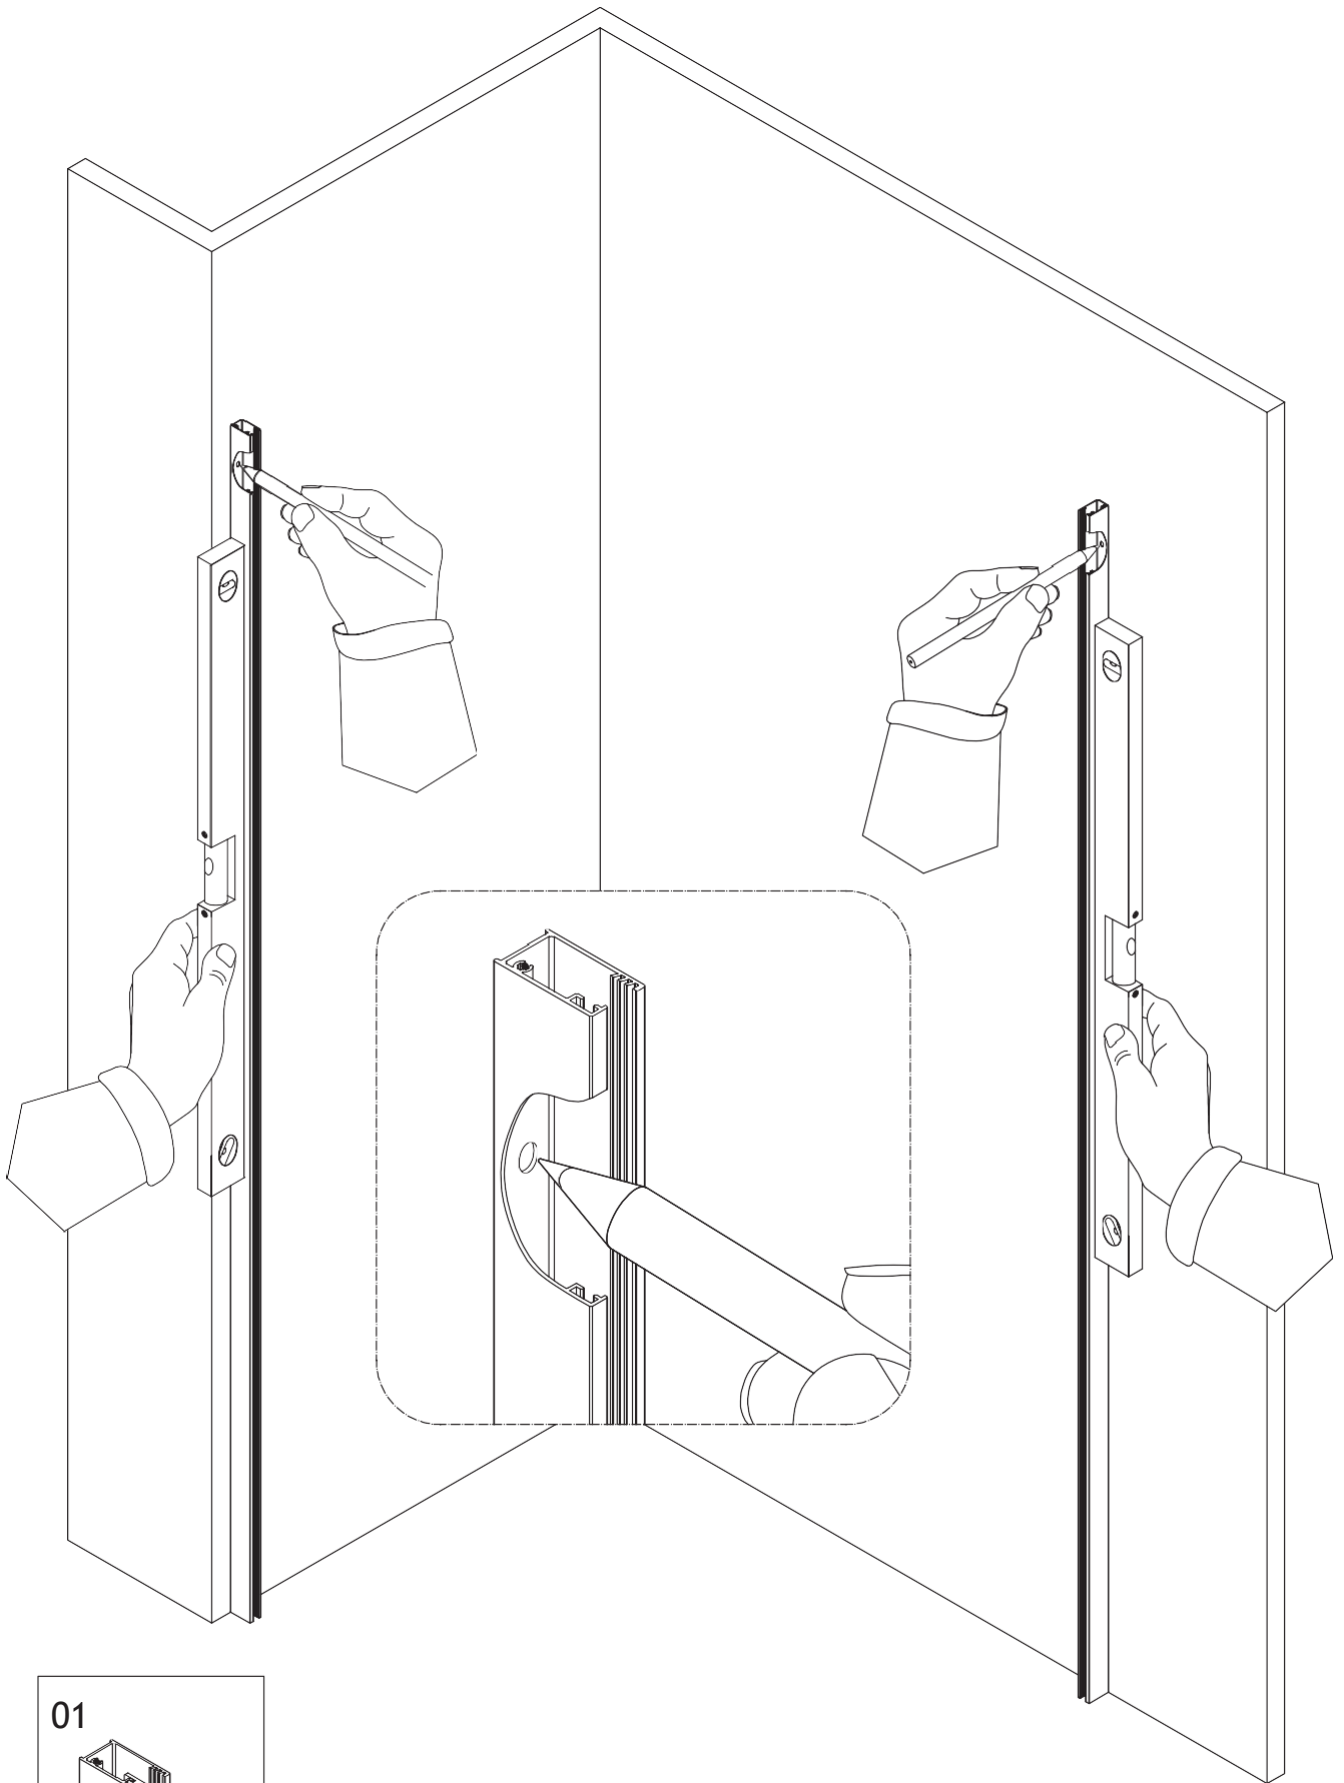








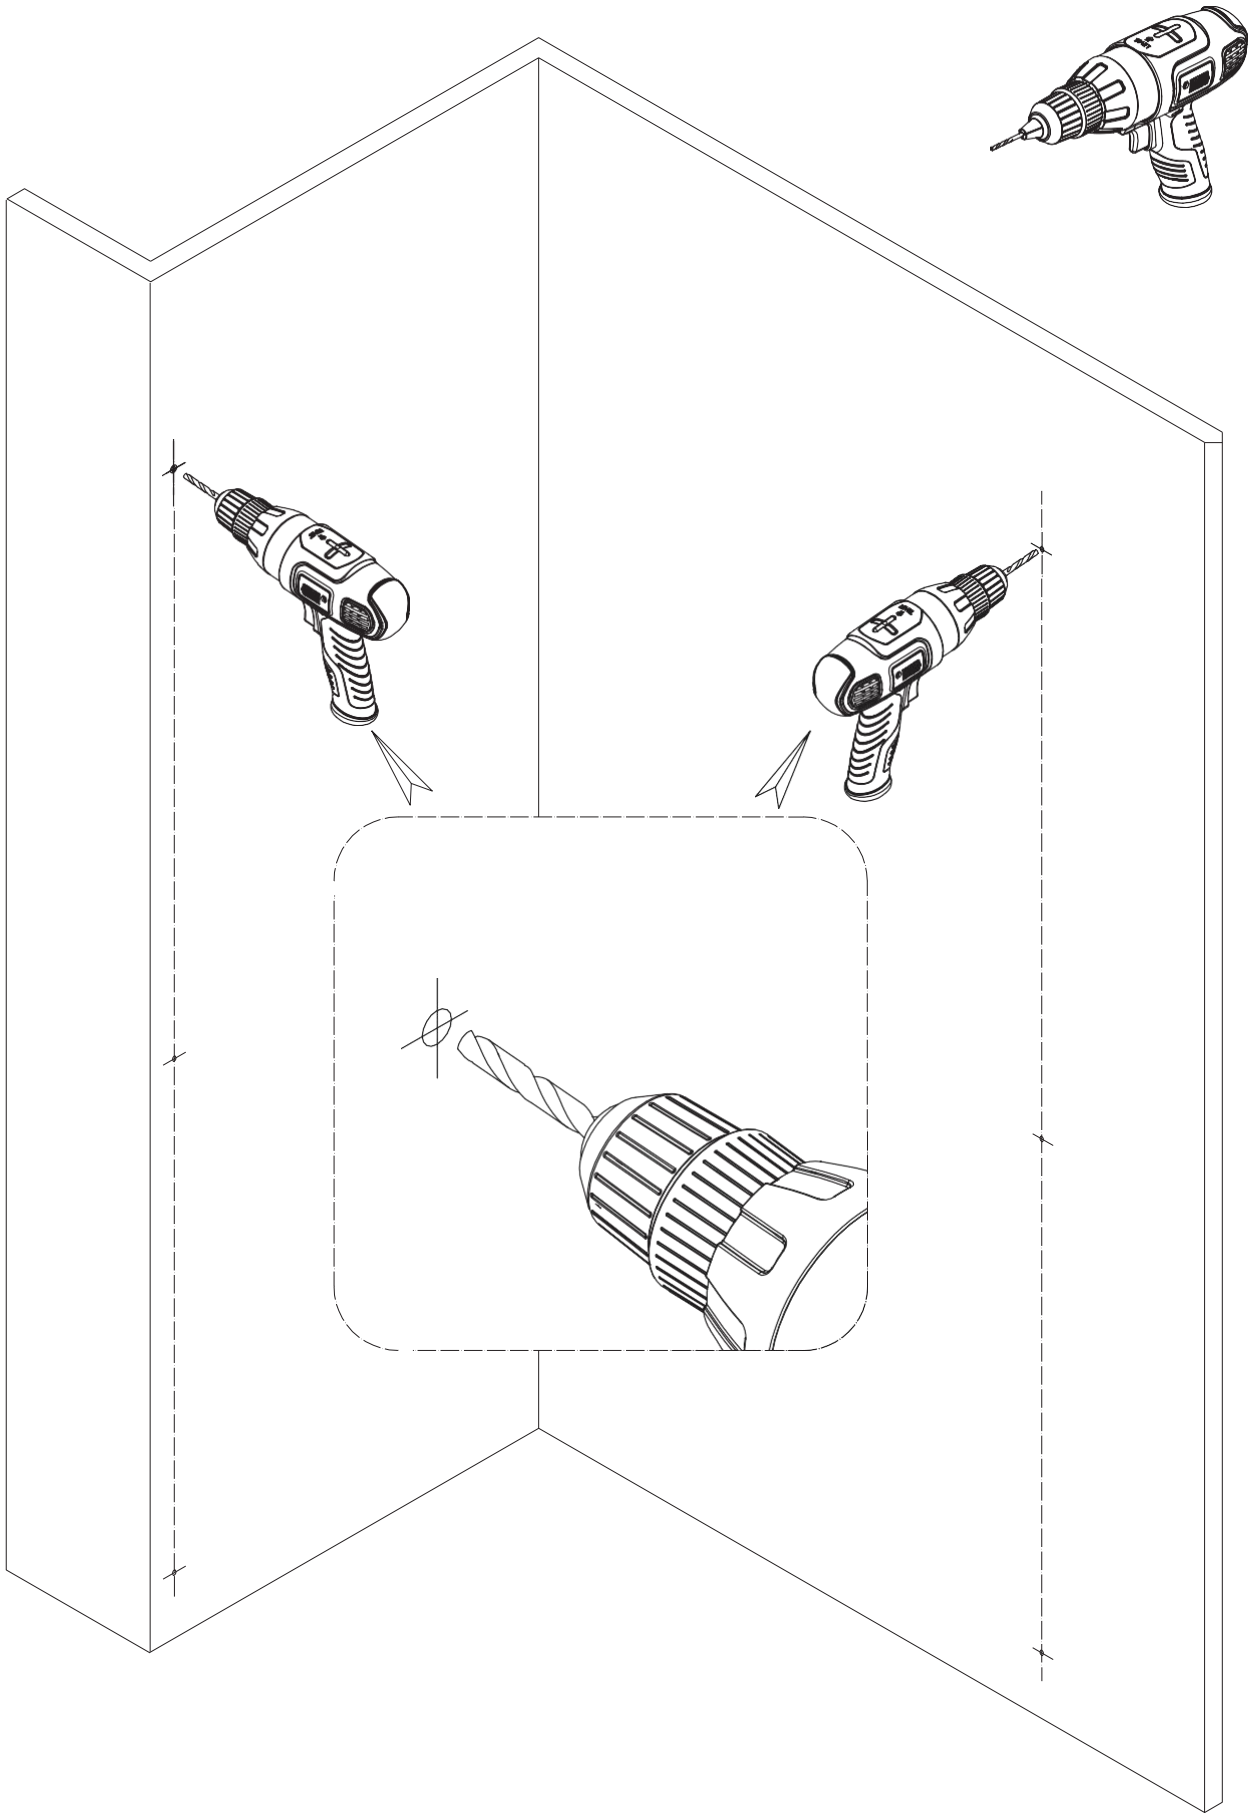


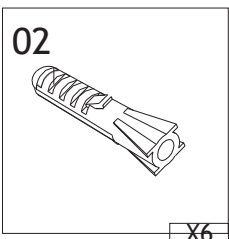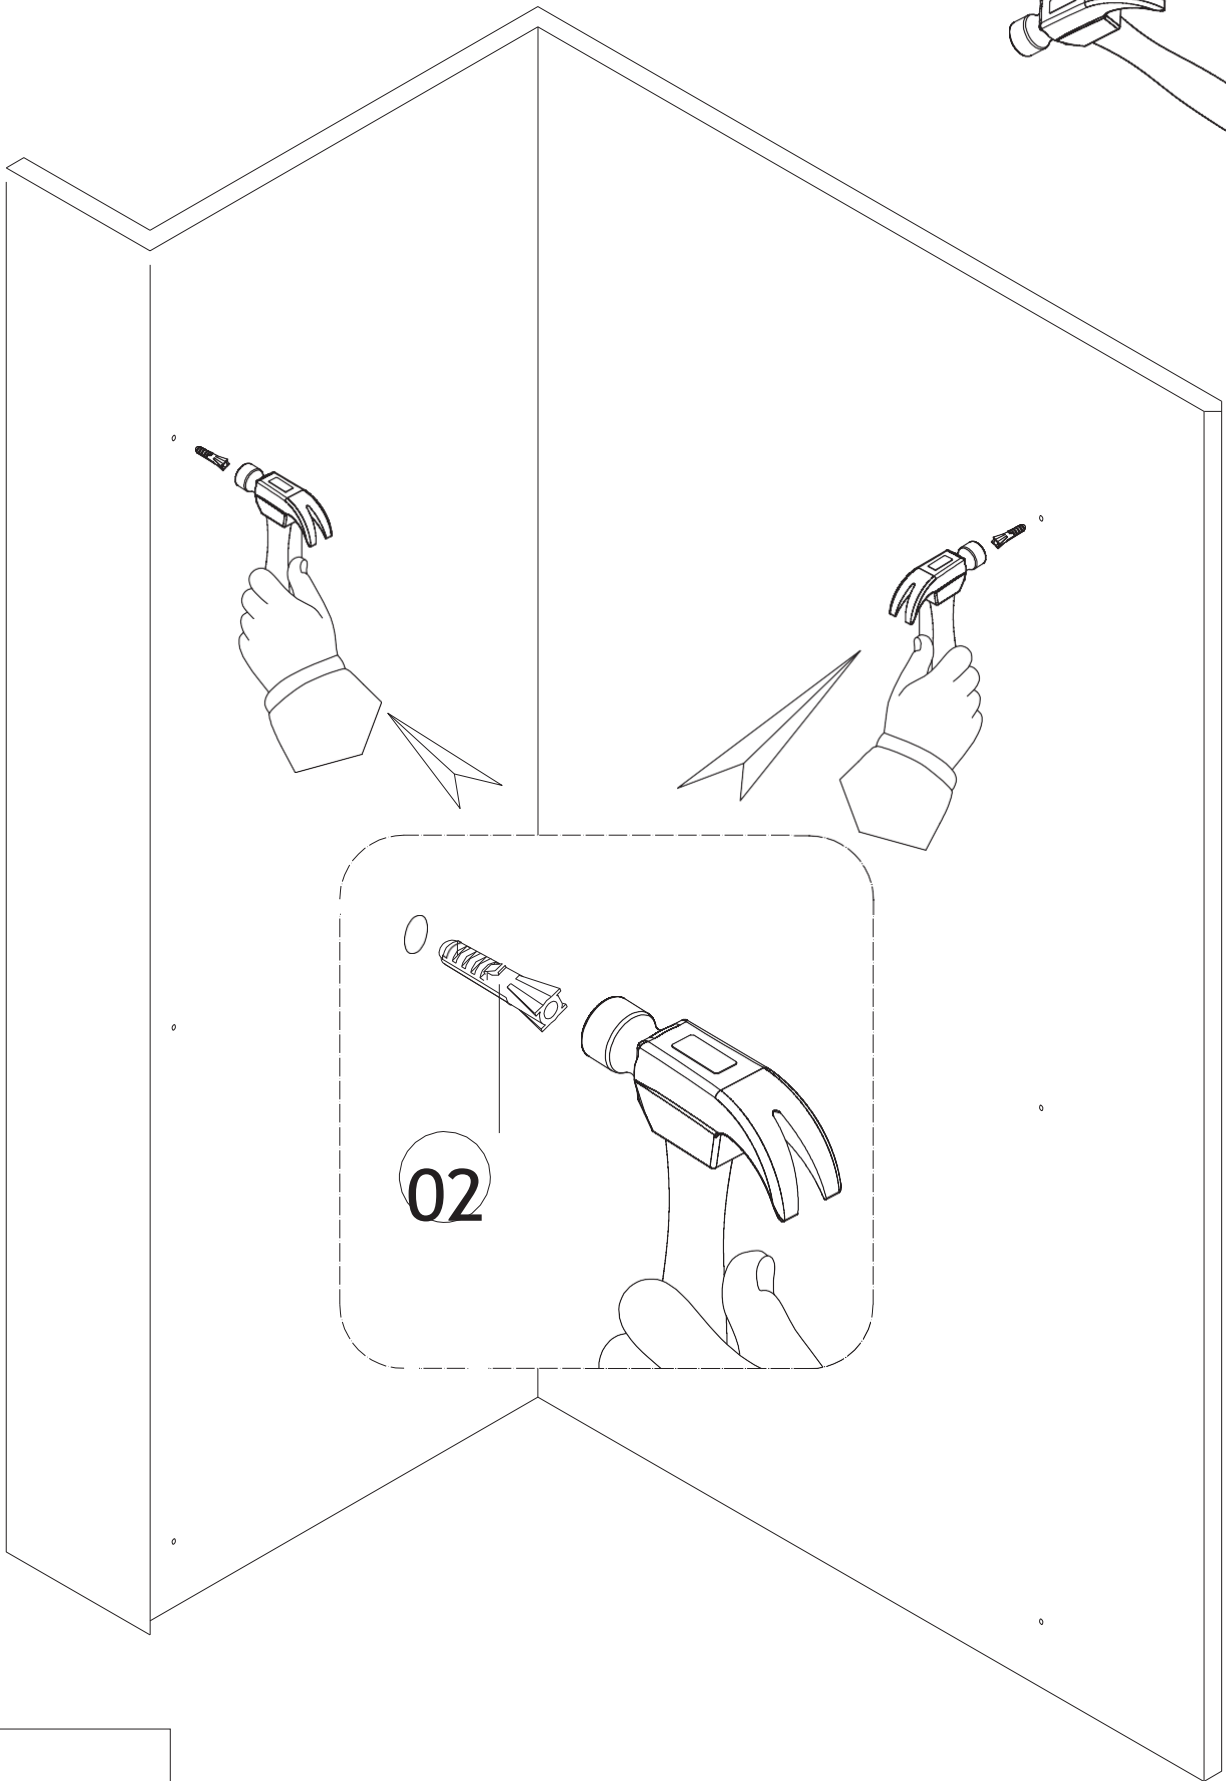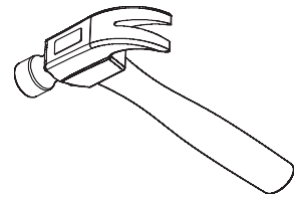




X6

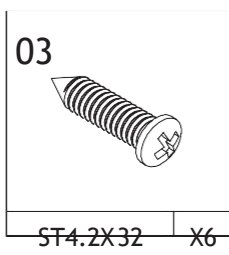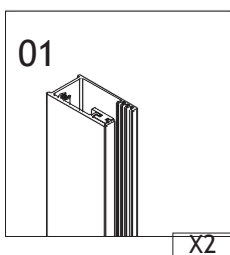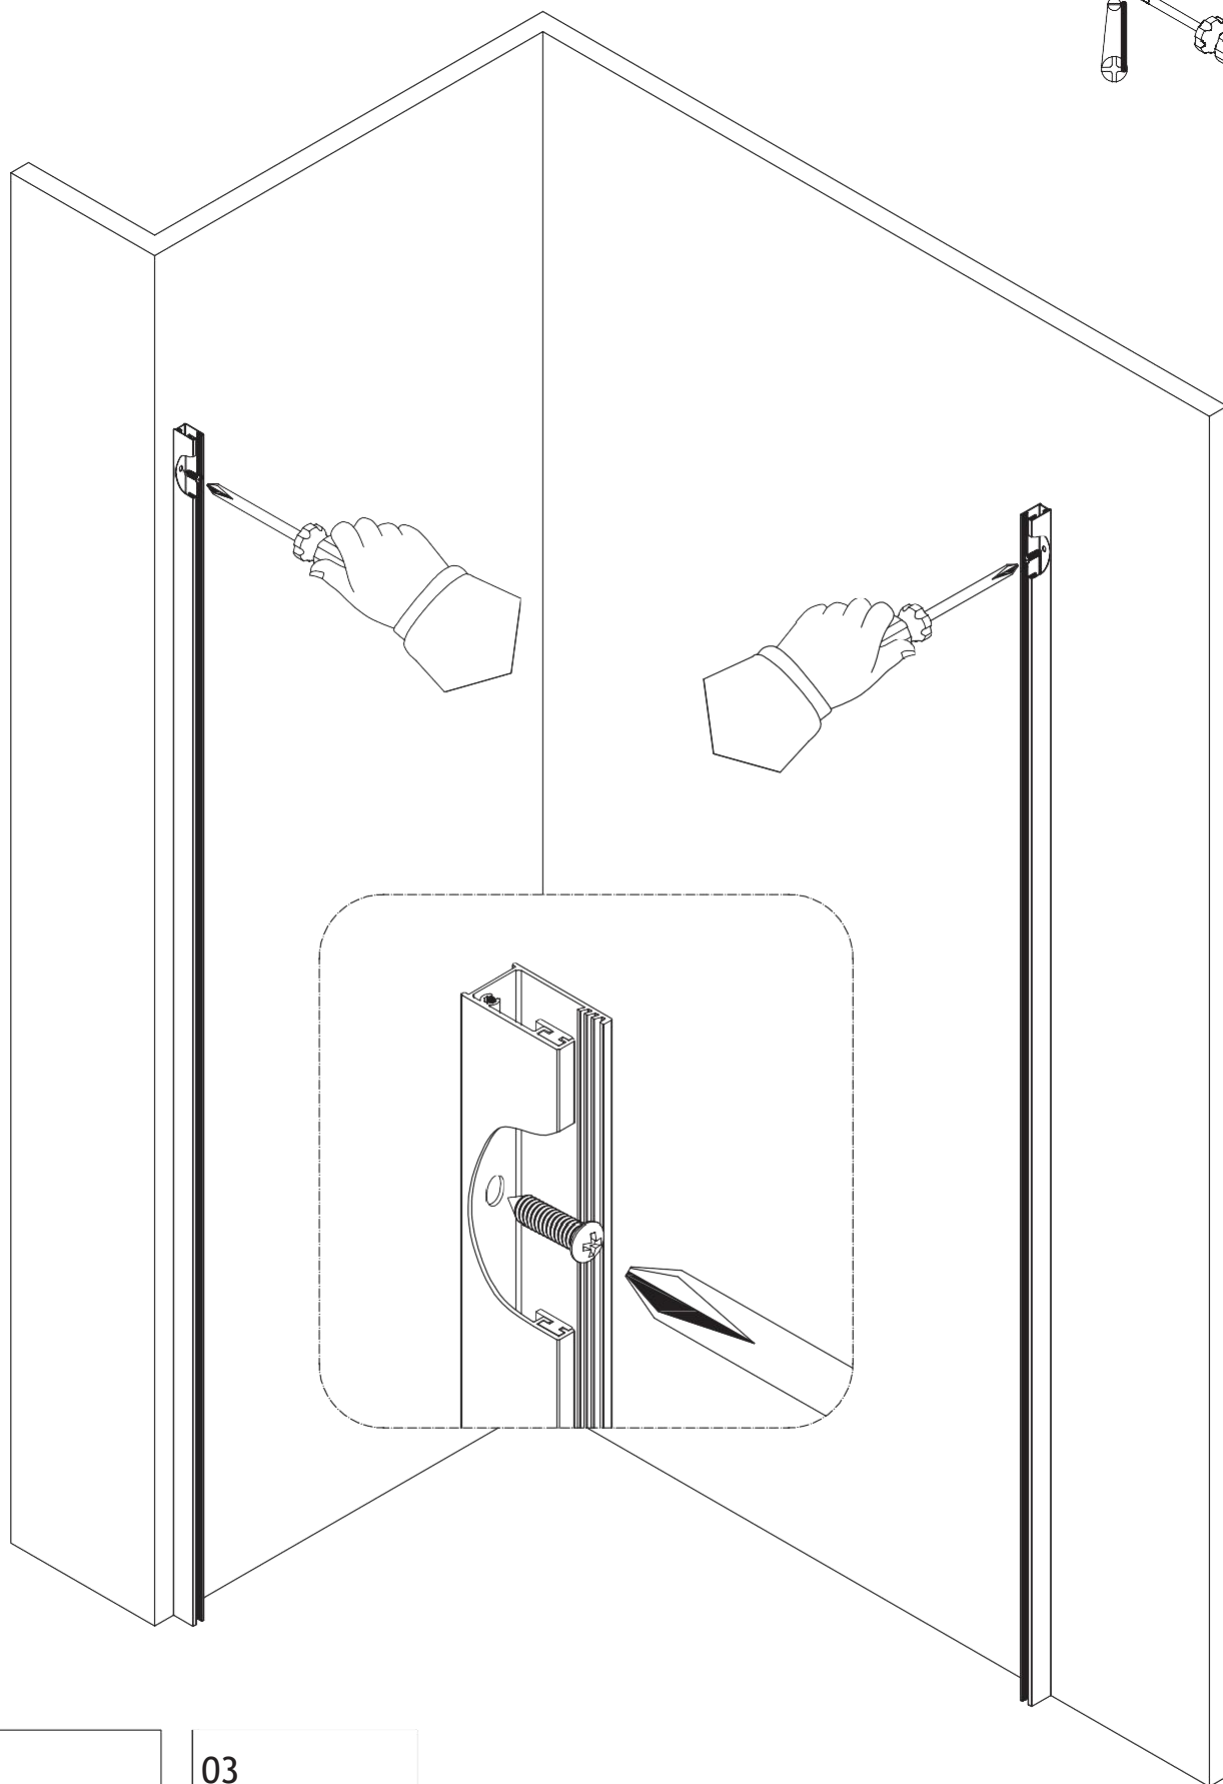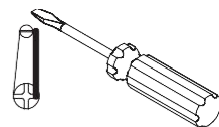


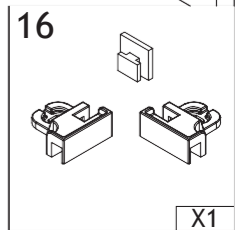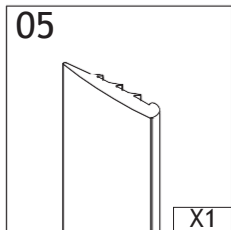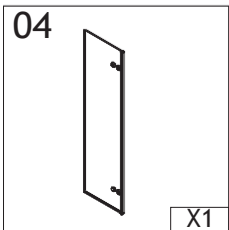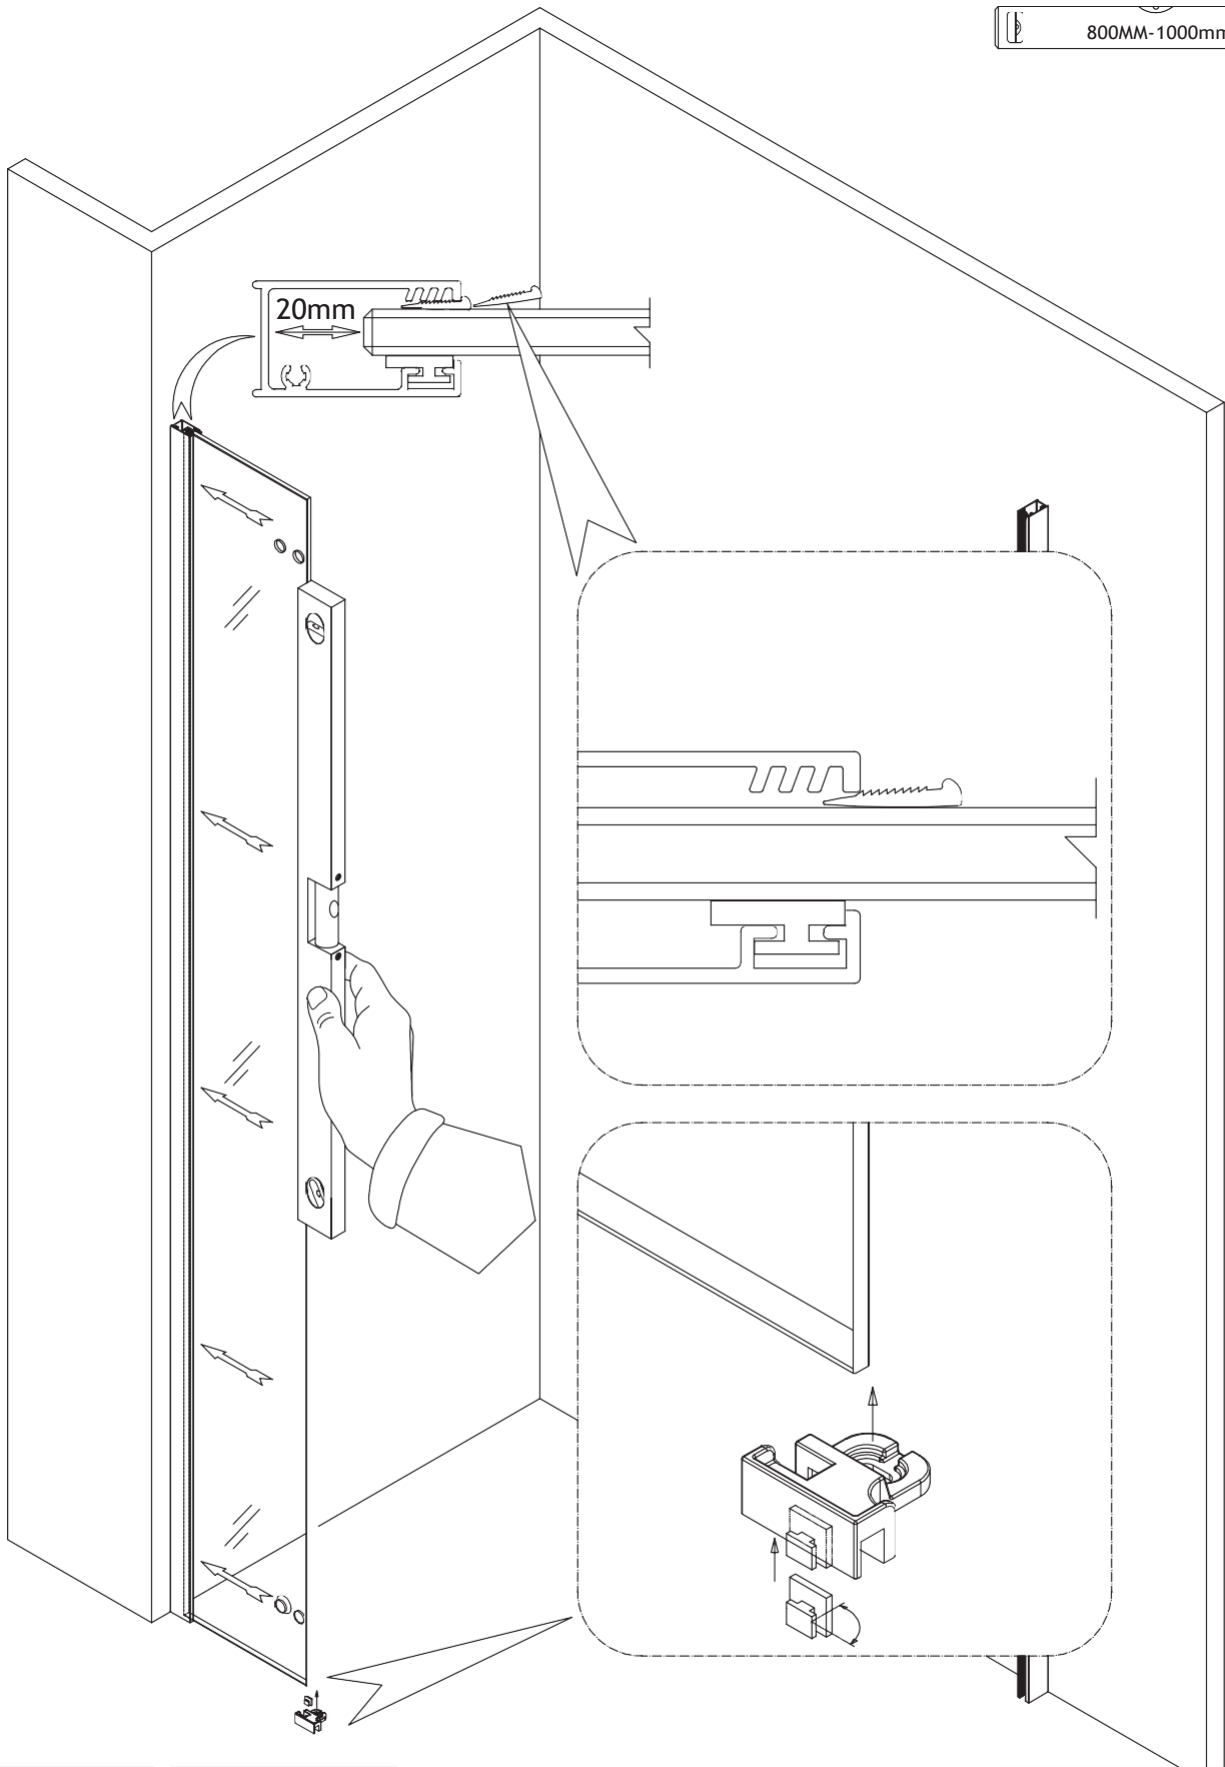

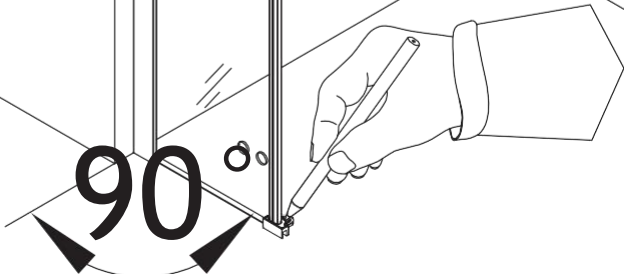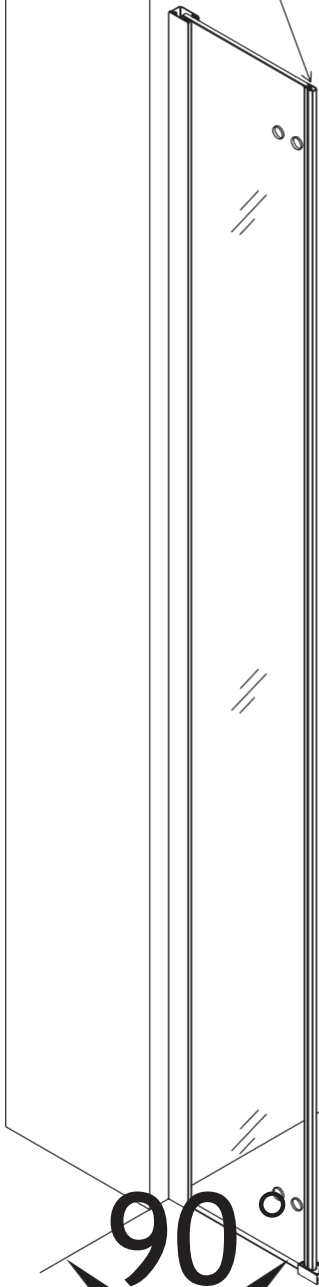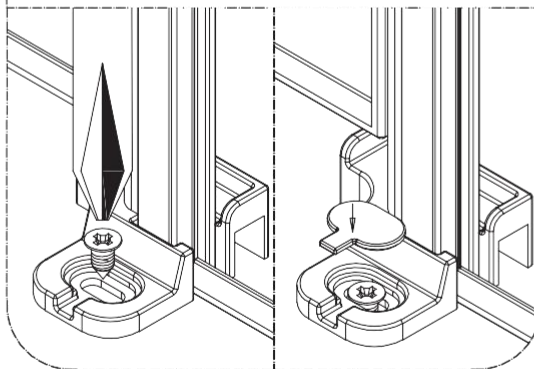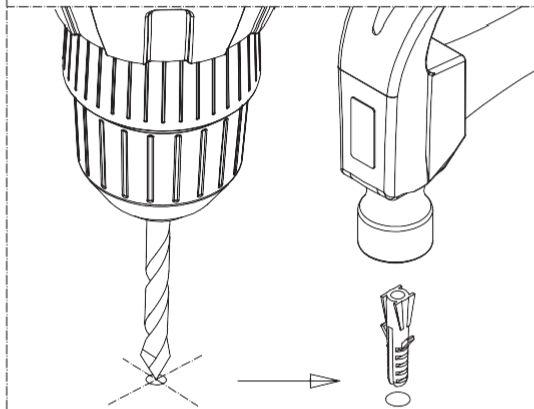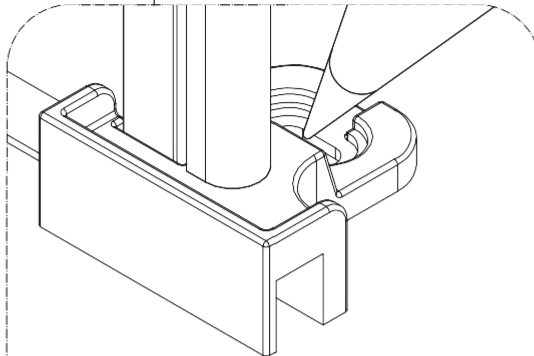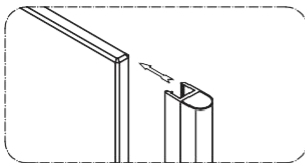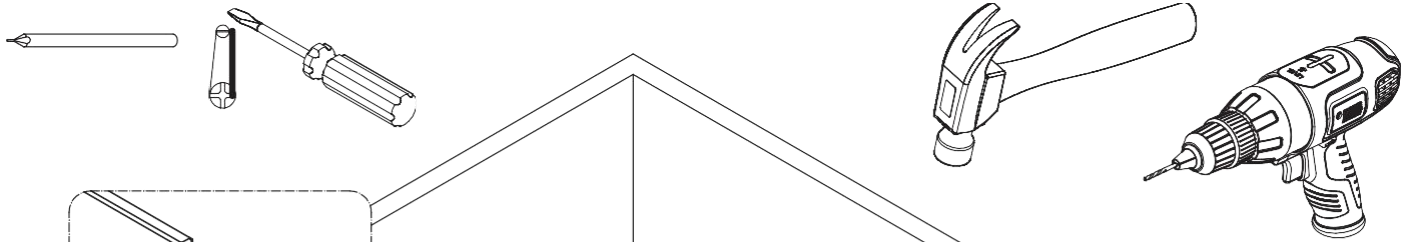


90

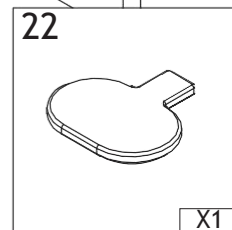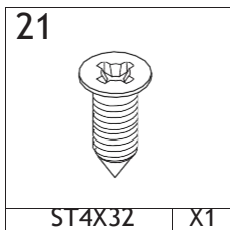
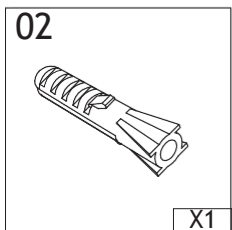


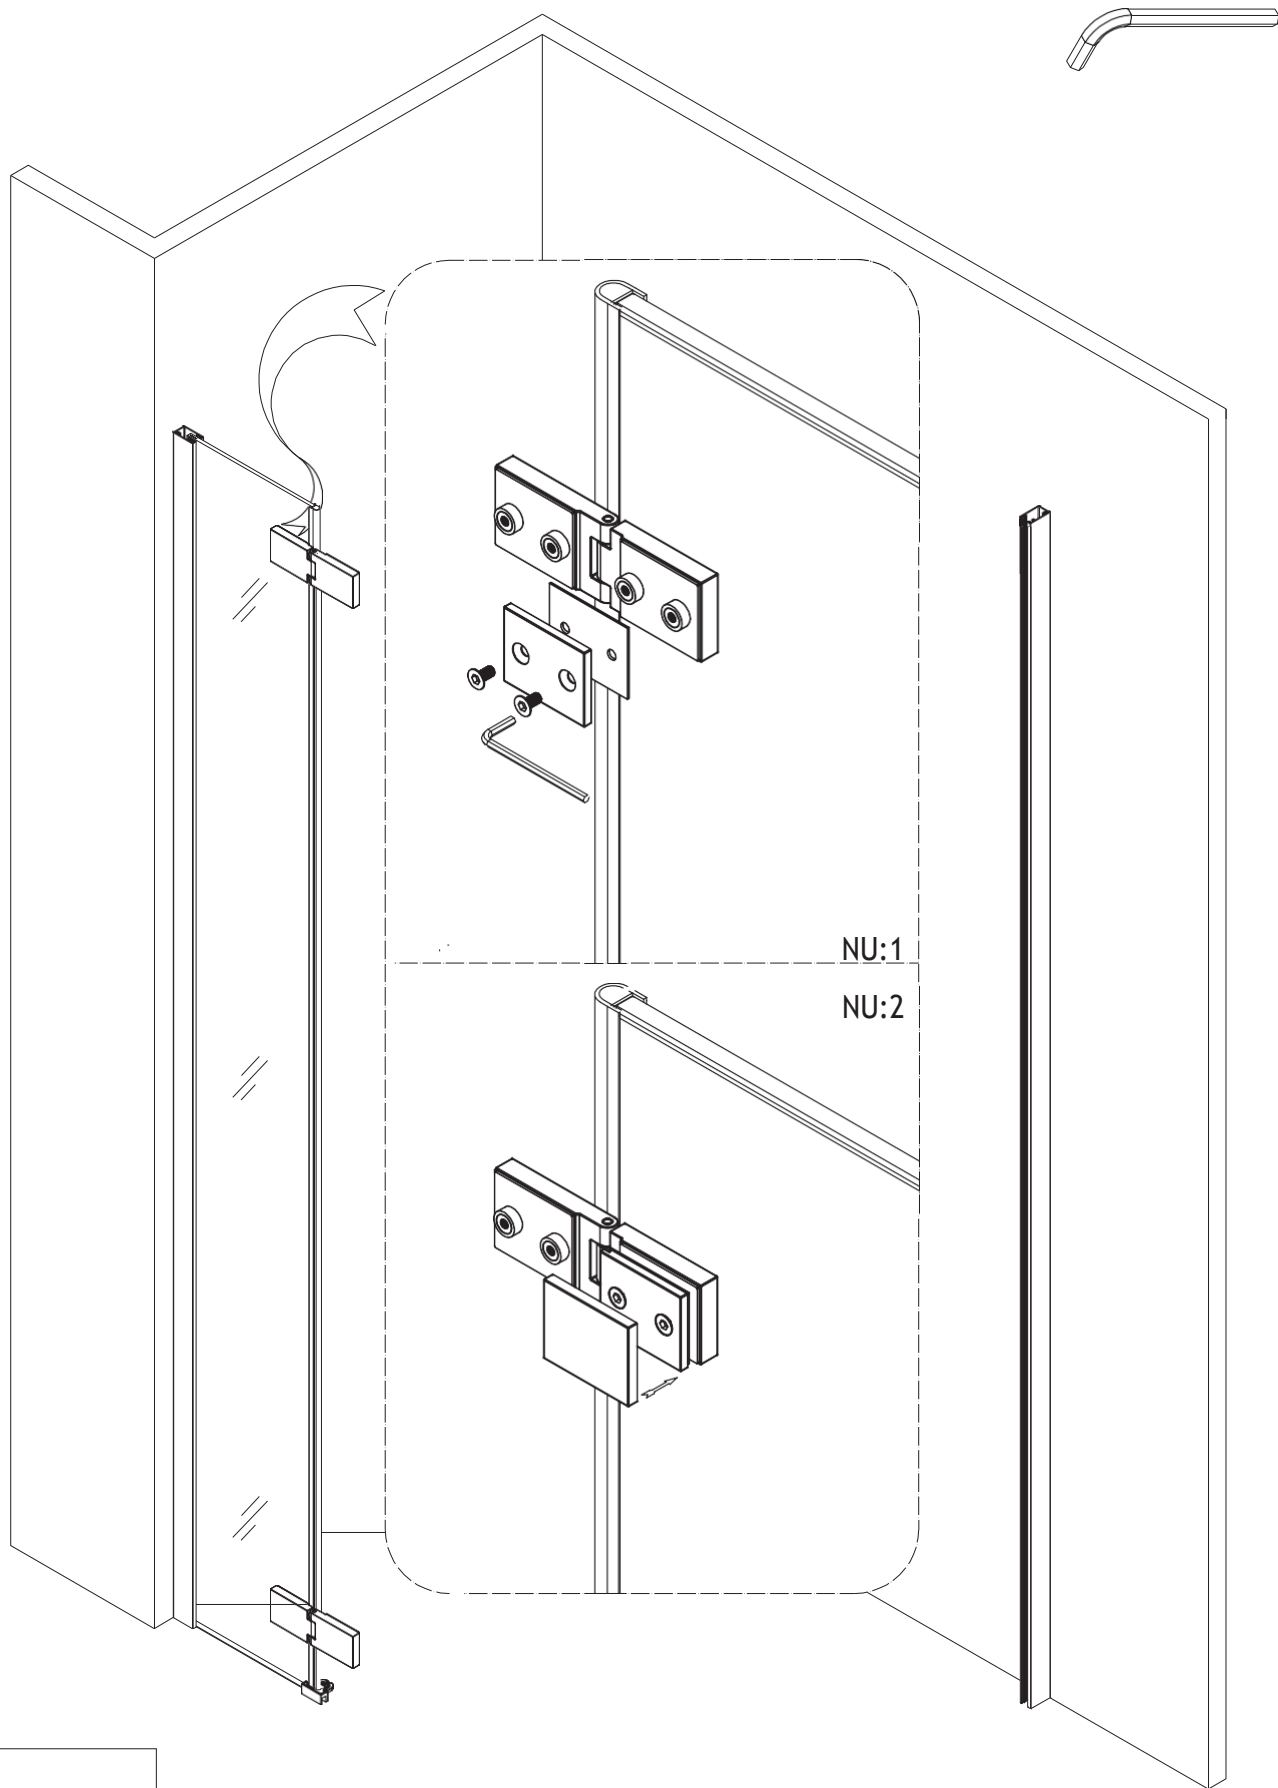


NU:1


NU:2

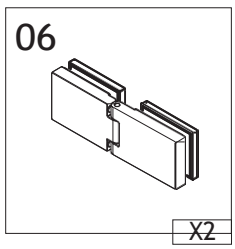


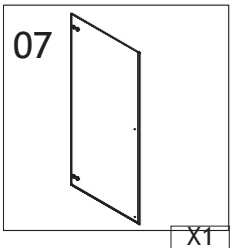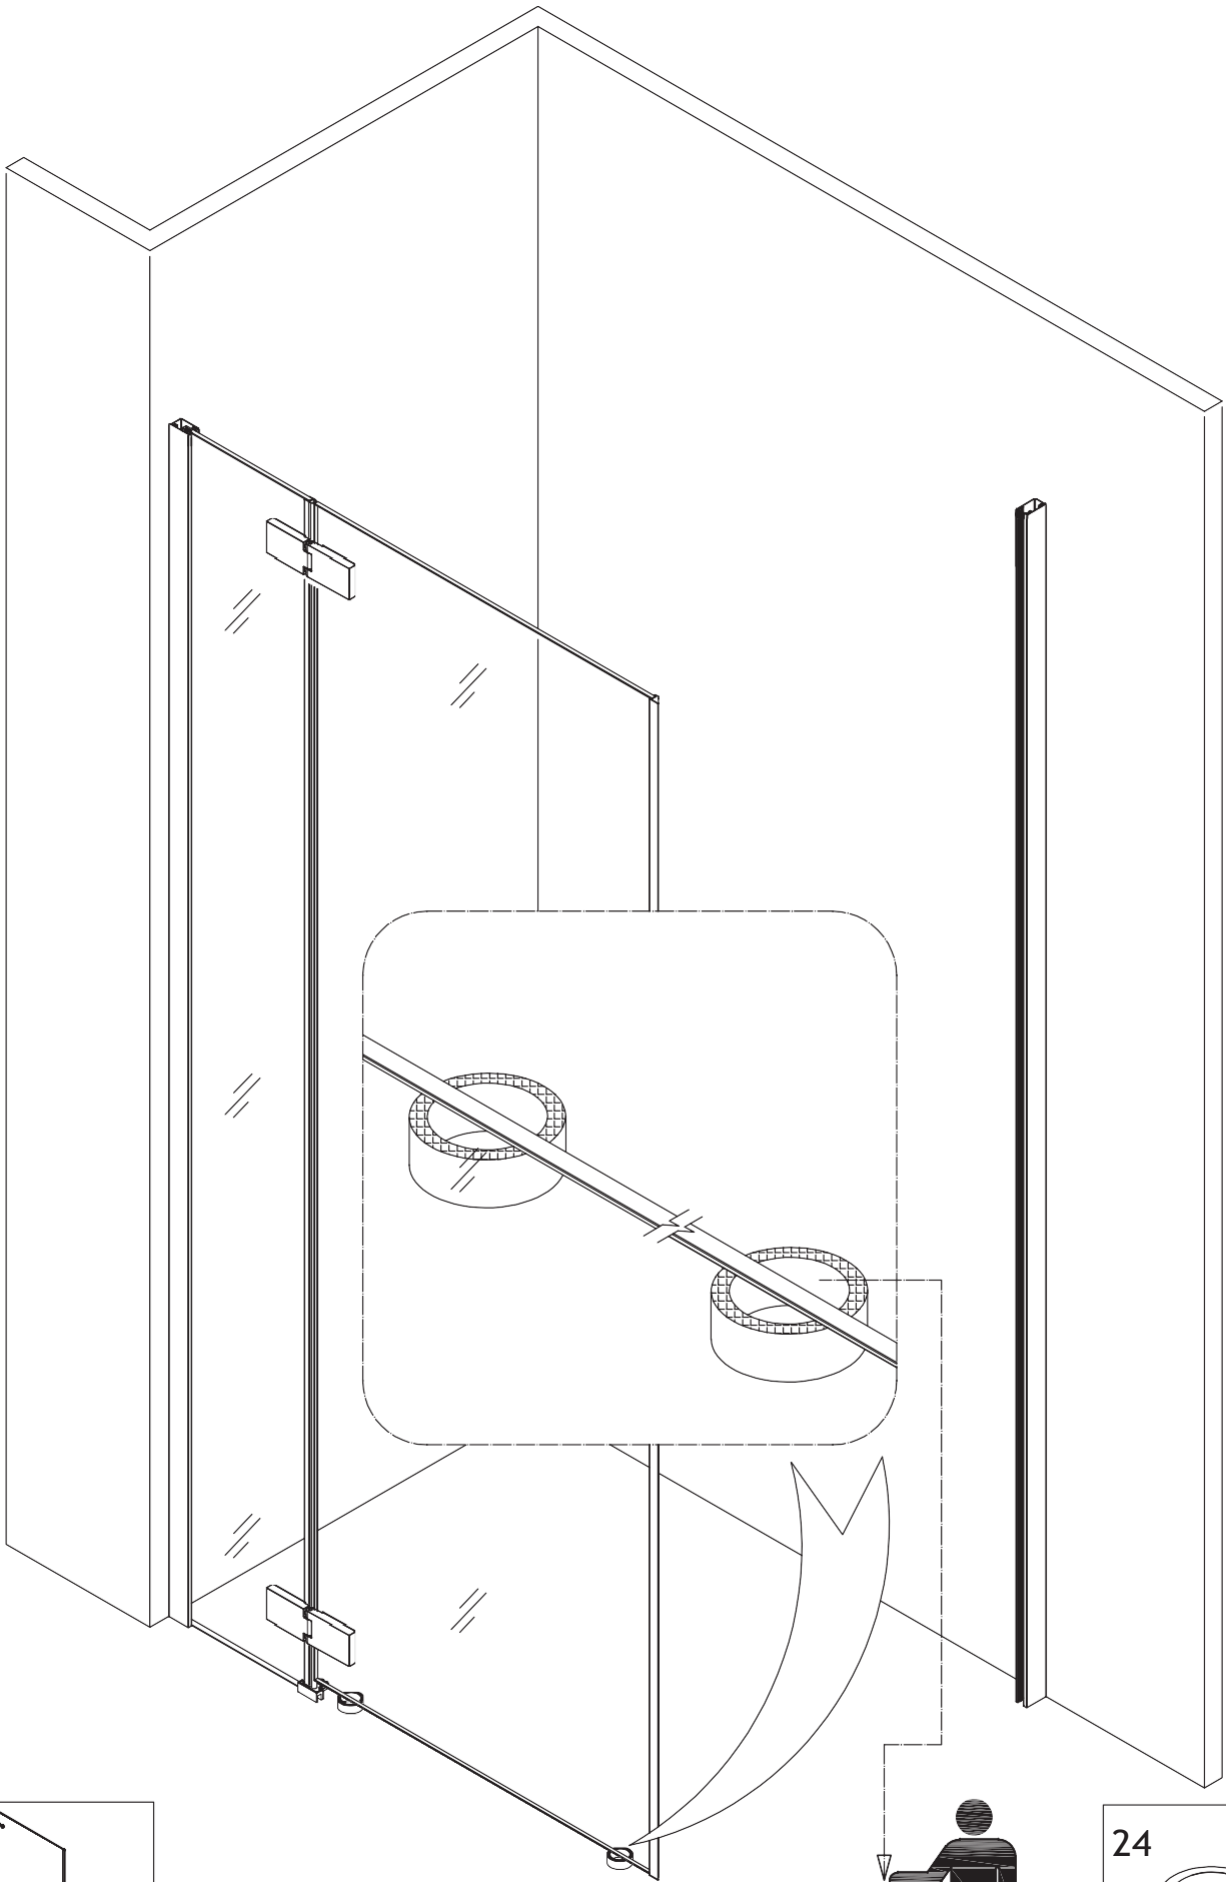






12

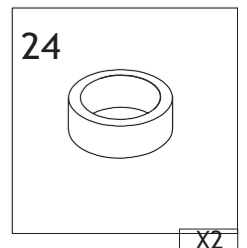


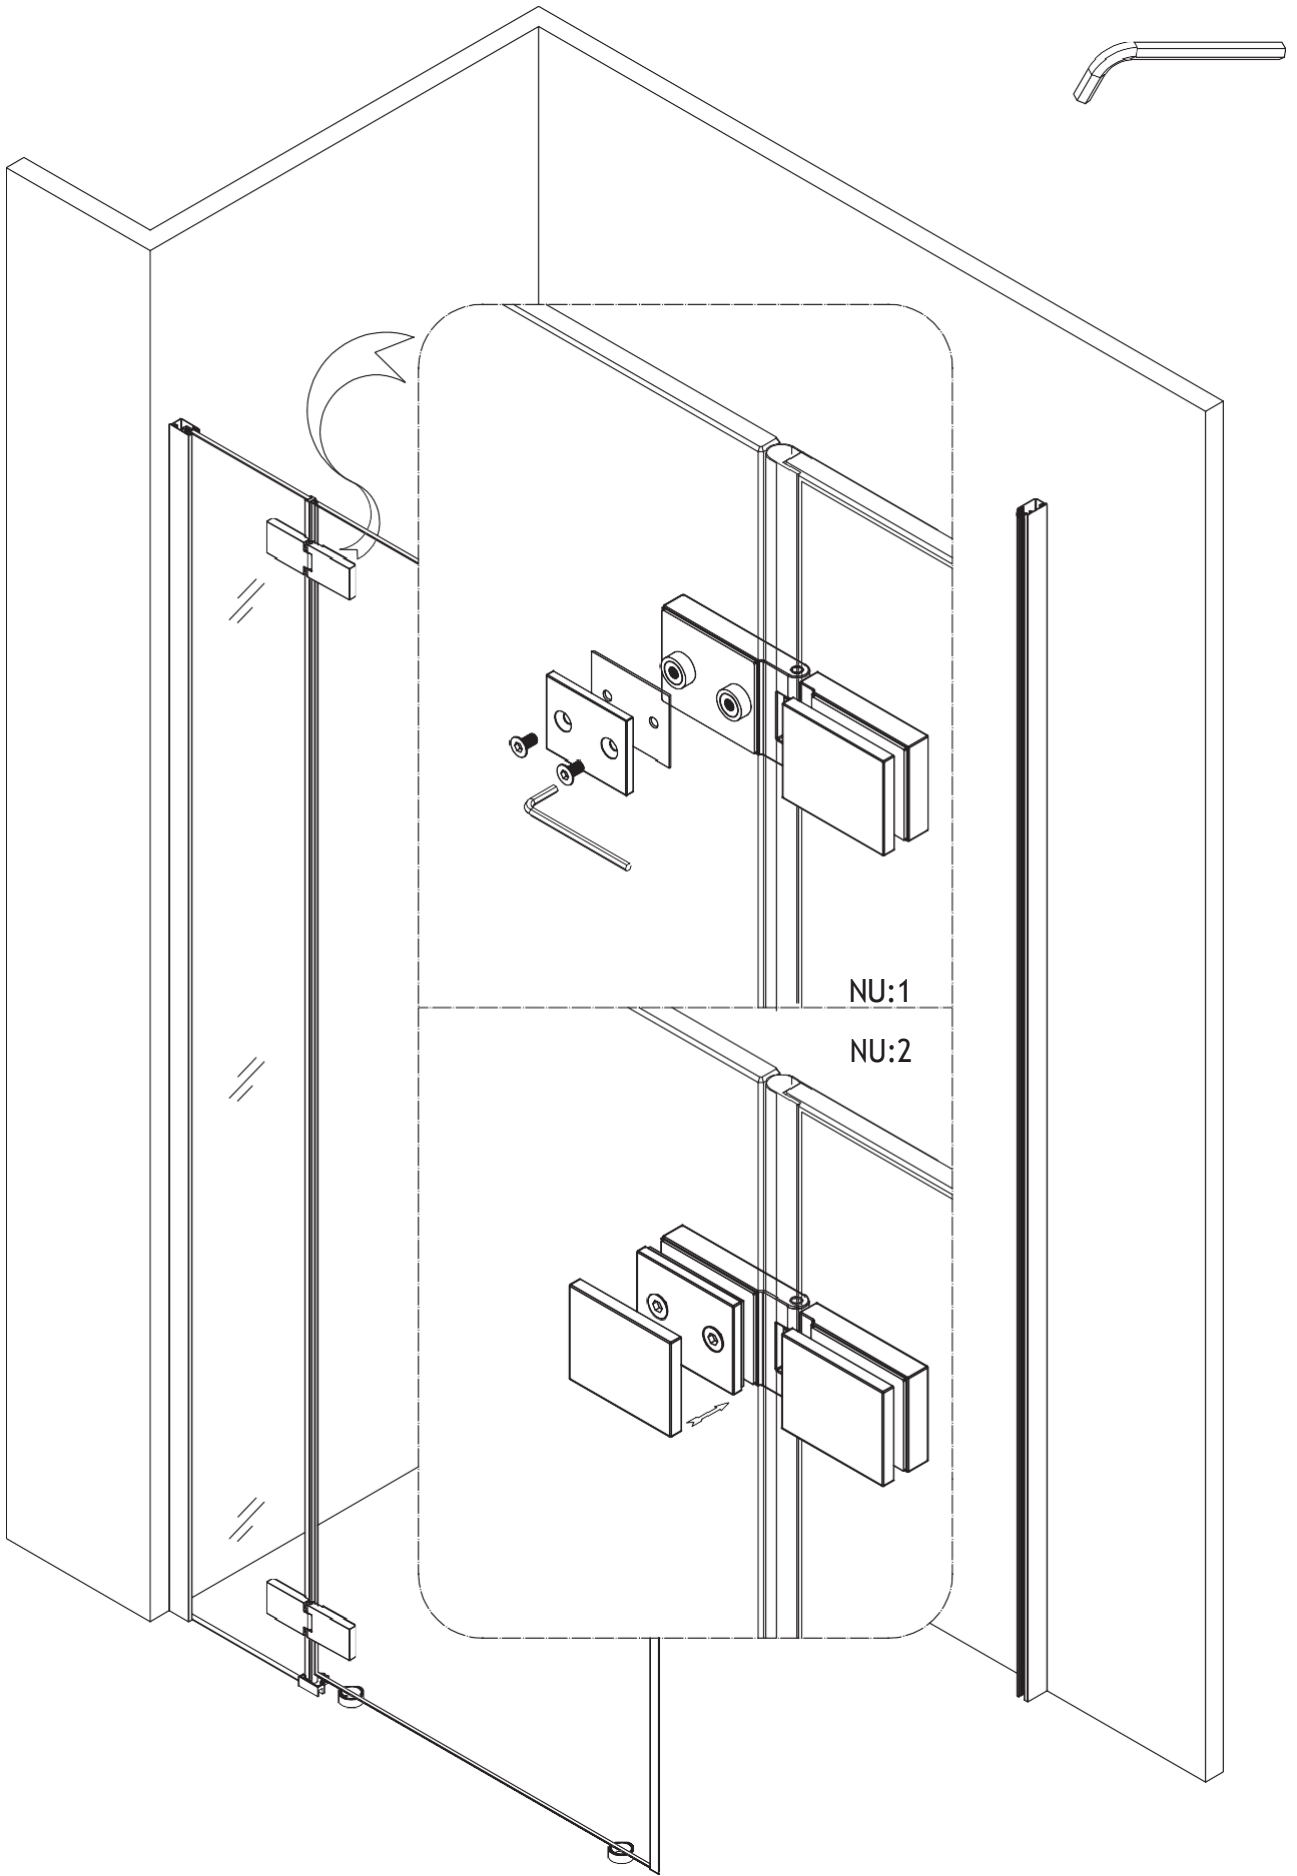

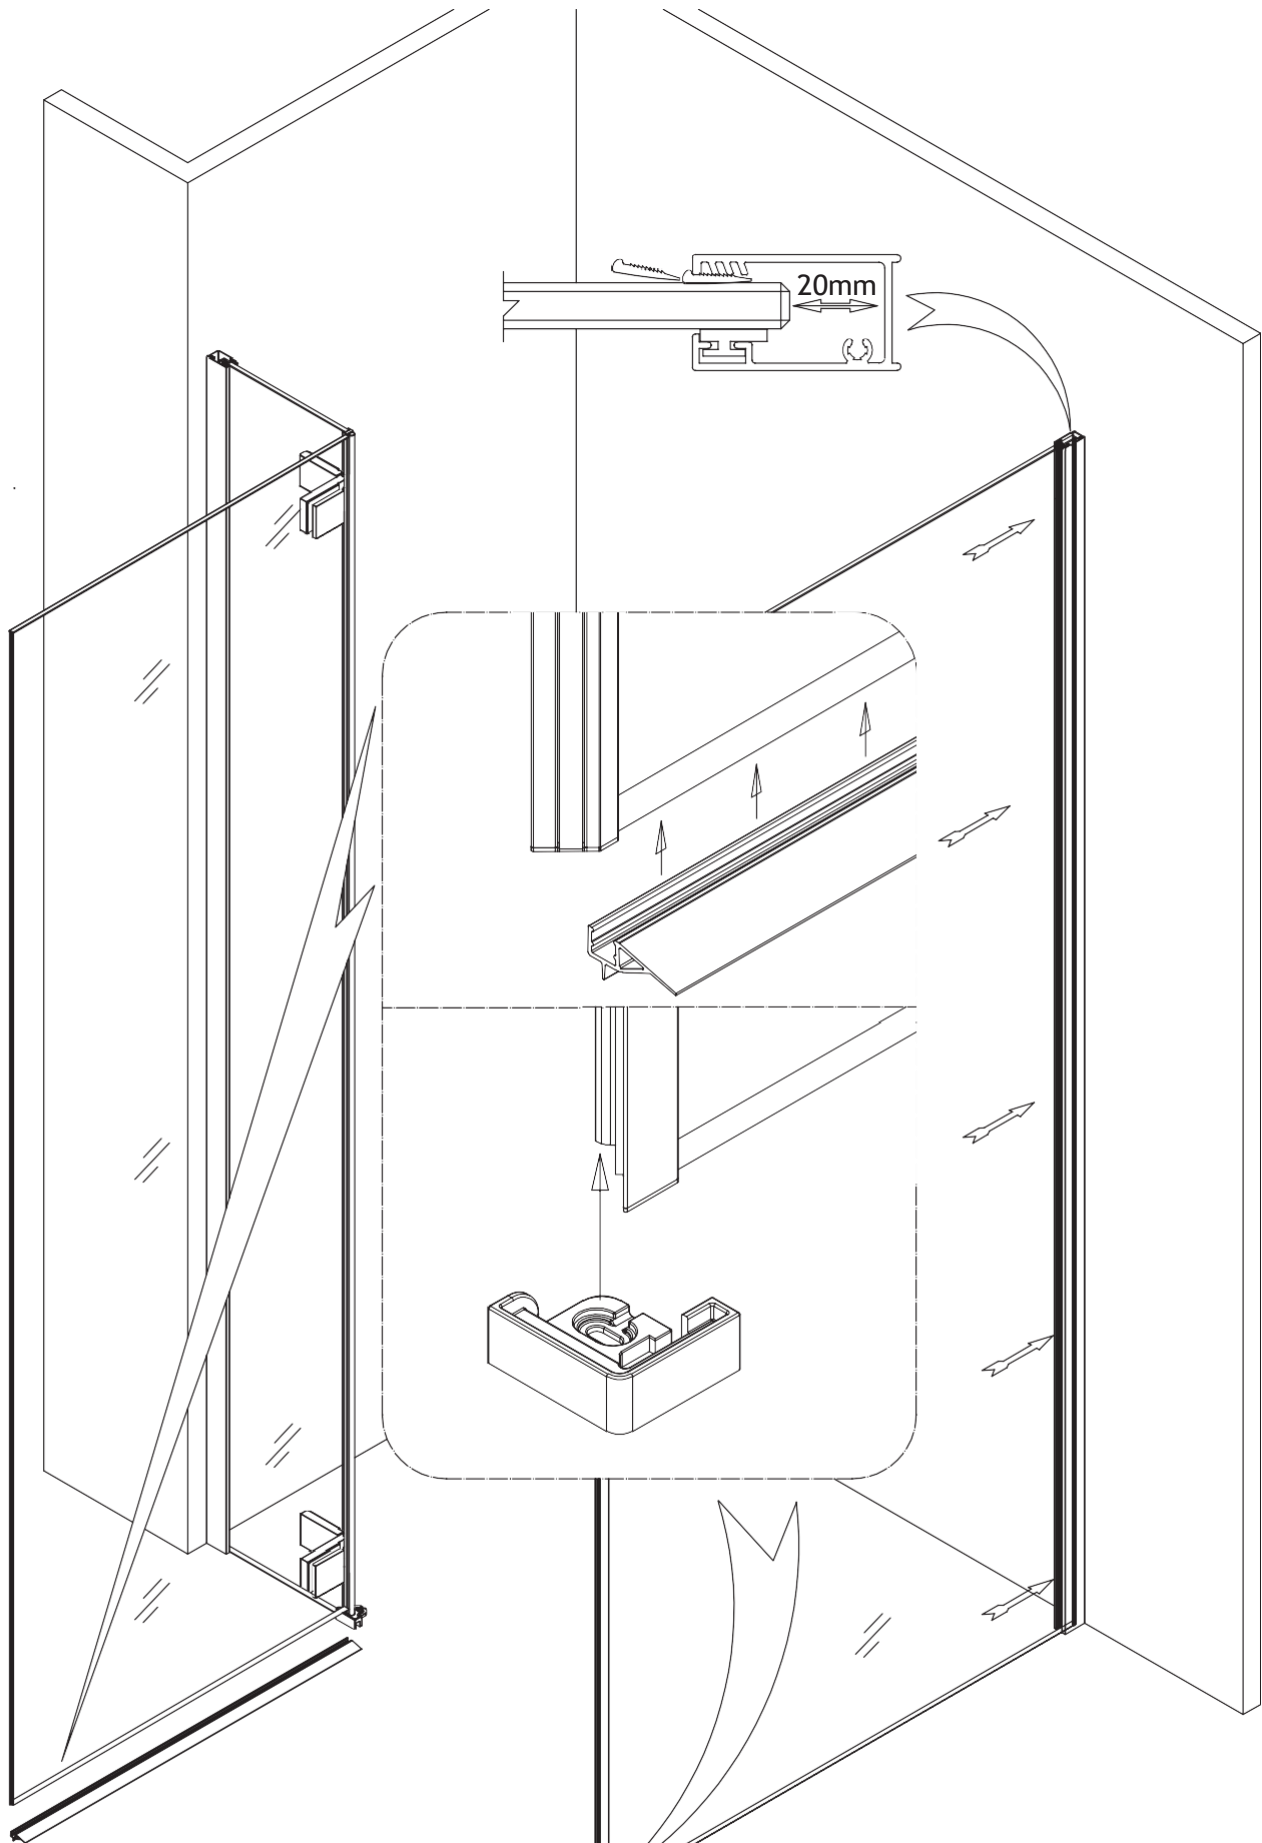

20mm

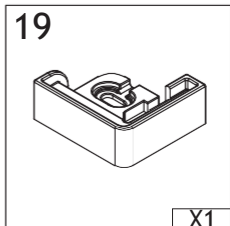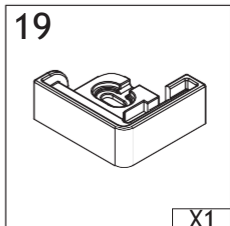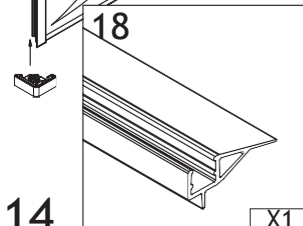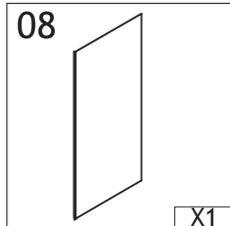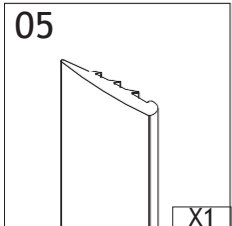

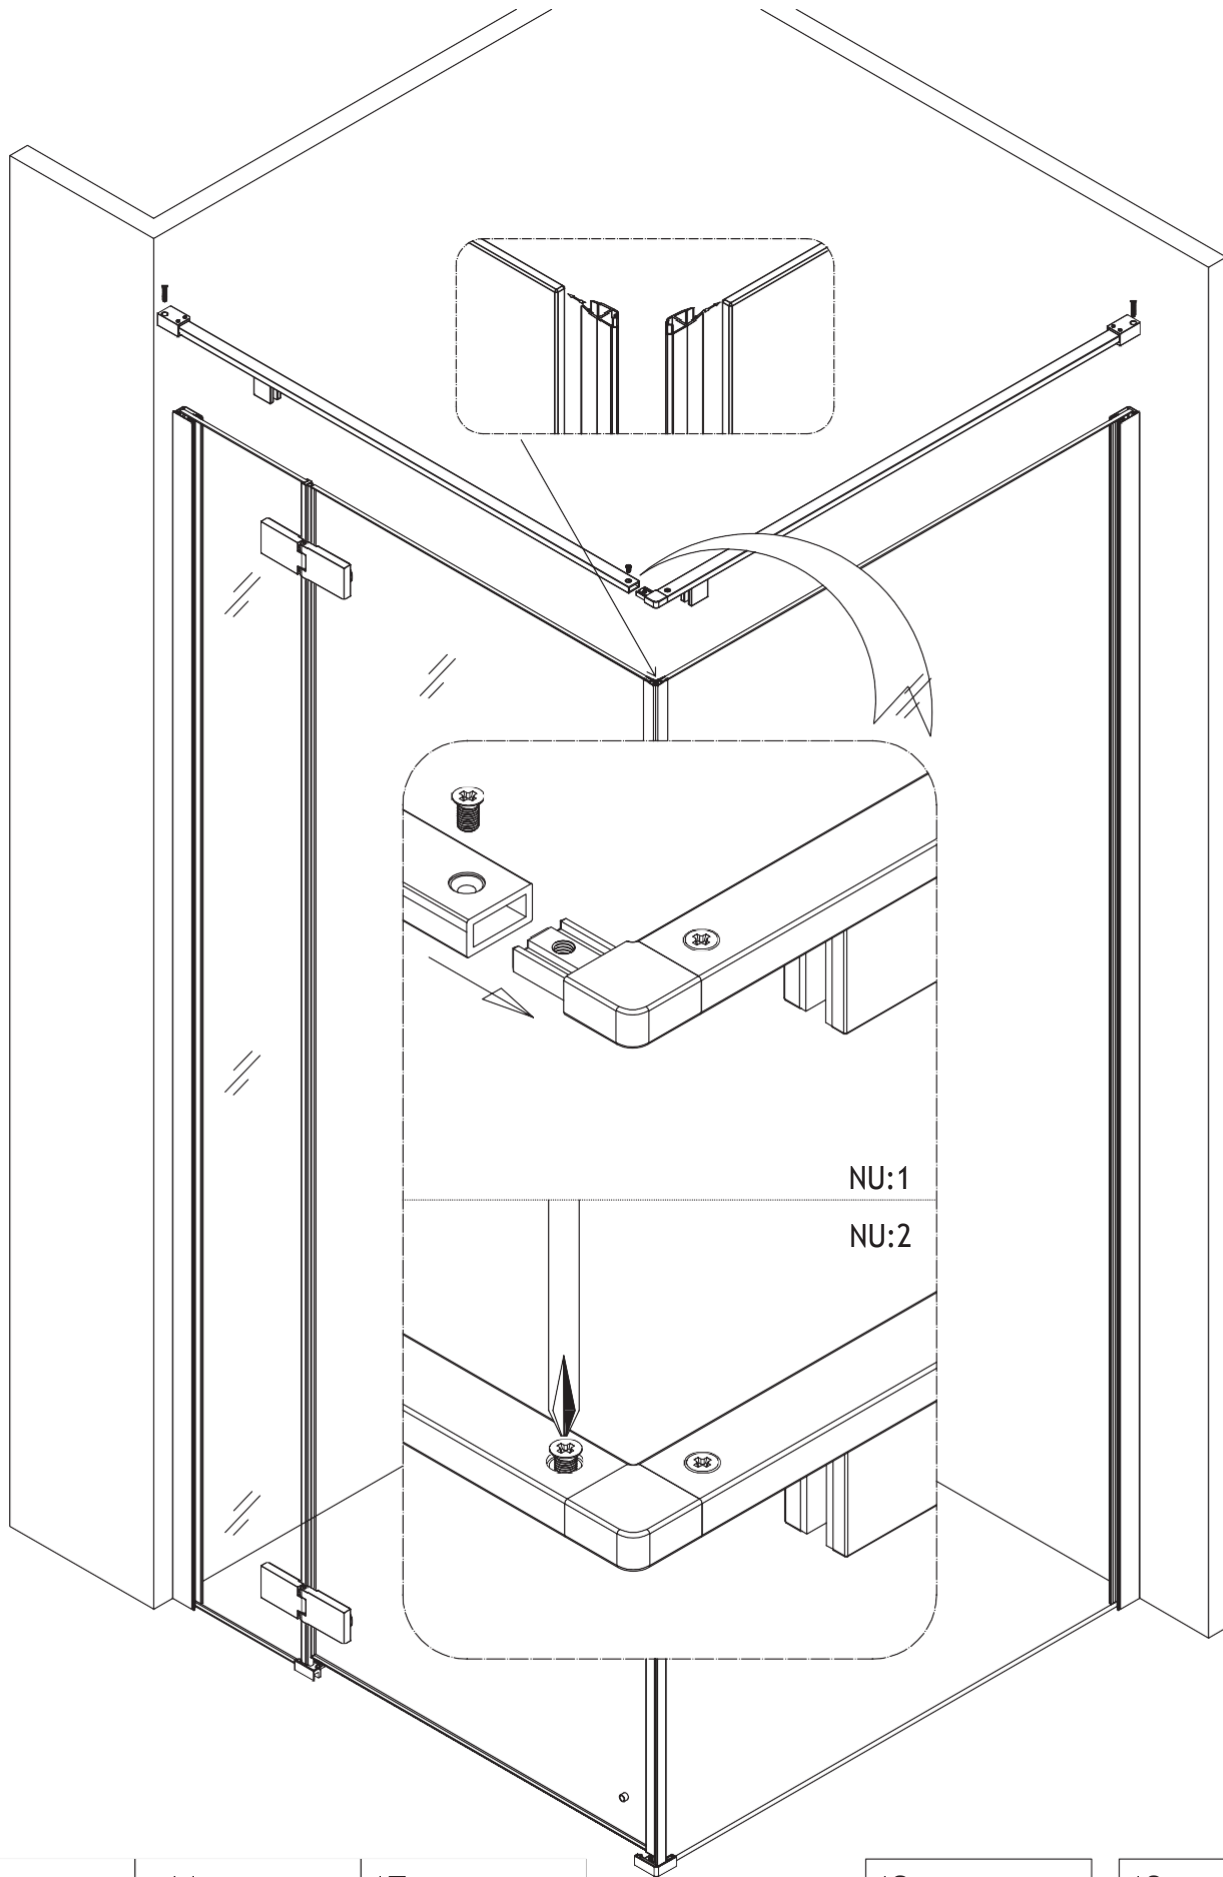

NU:1



NU:2



<p>09</p> <p>X2</p>	<p>11</p> <p>X1</p>	<p>17</p> <p>X1</p>
---------------------	---------------------	---------------------

15

<p>12</p> <p>X1</p>

<p>13</p> <p>X1</p>

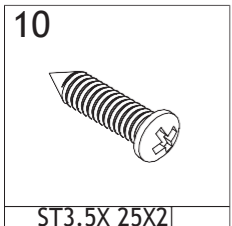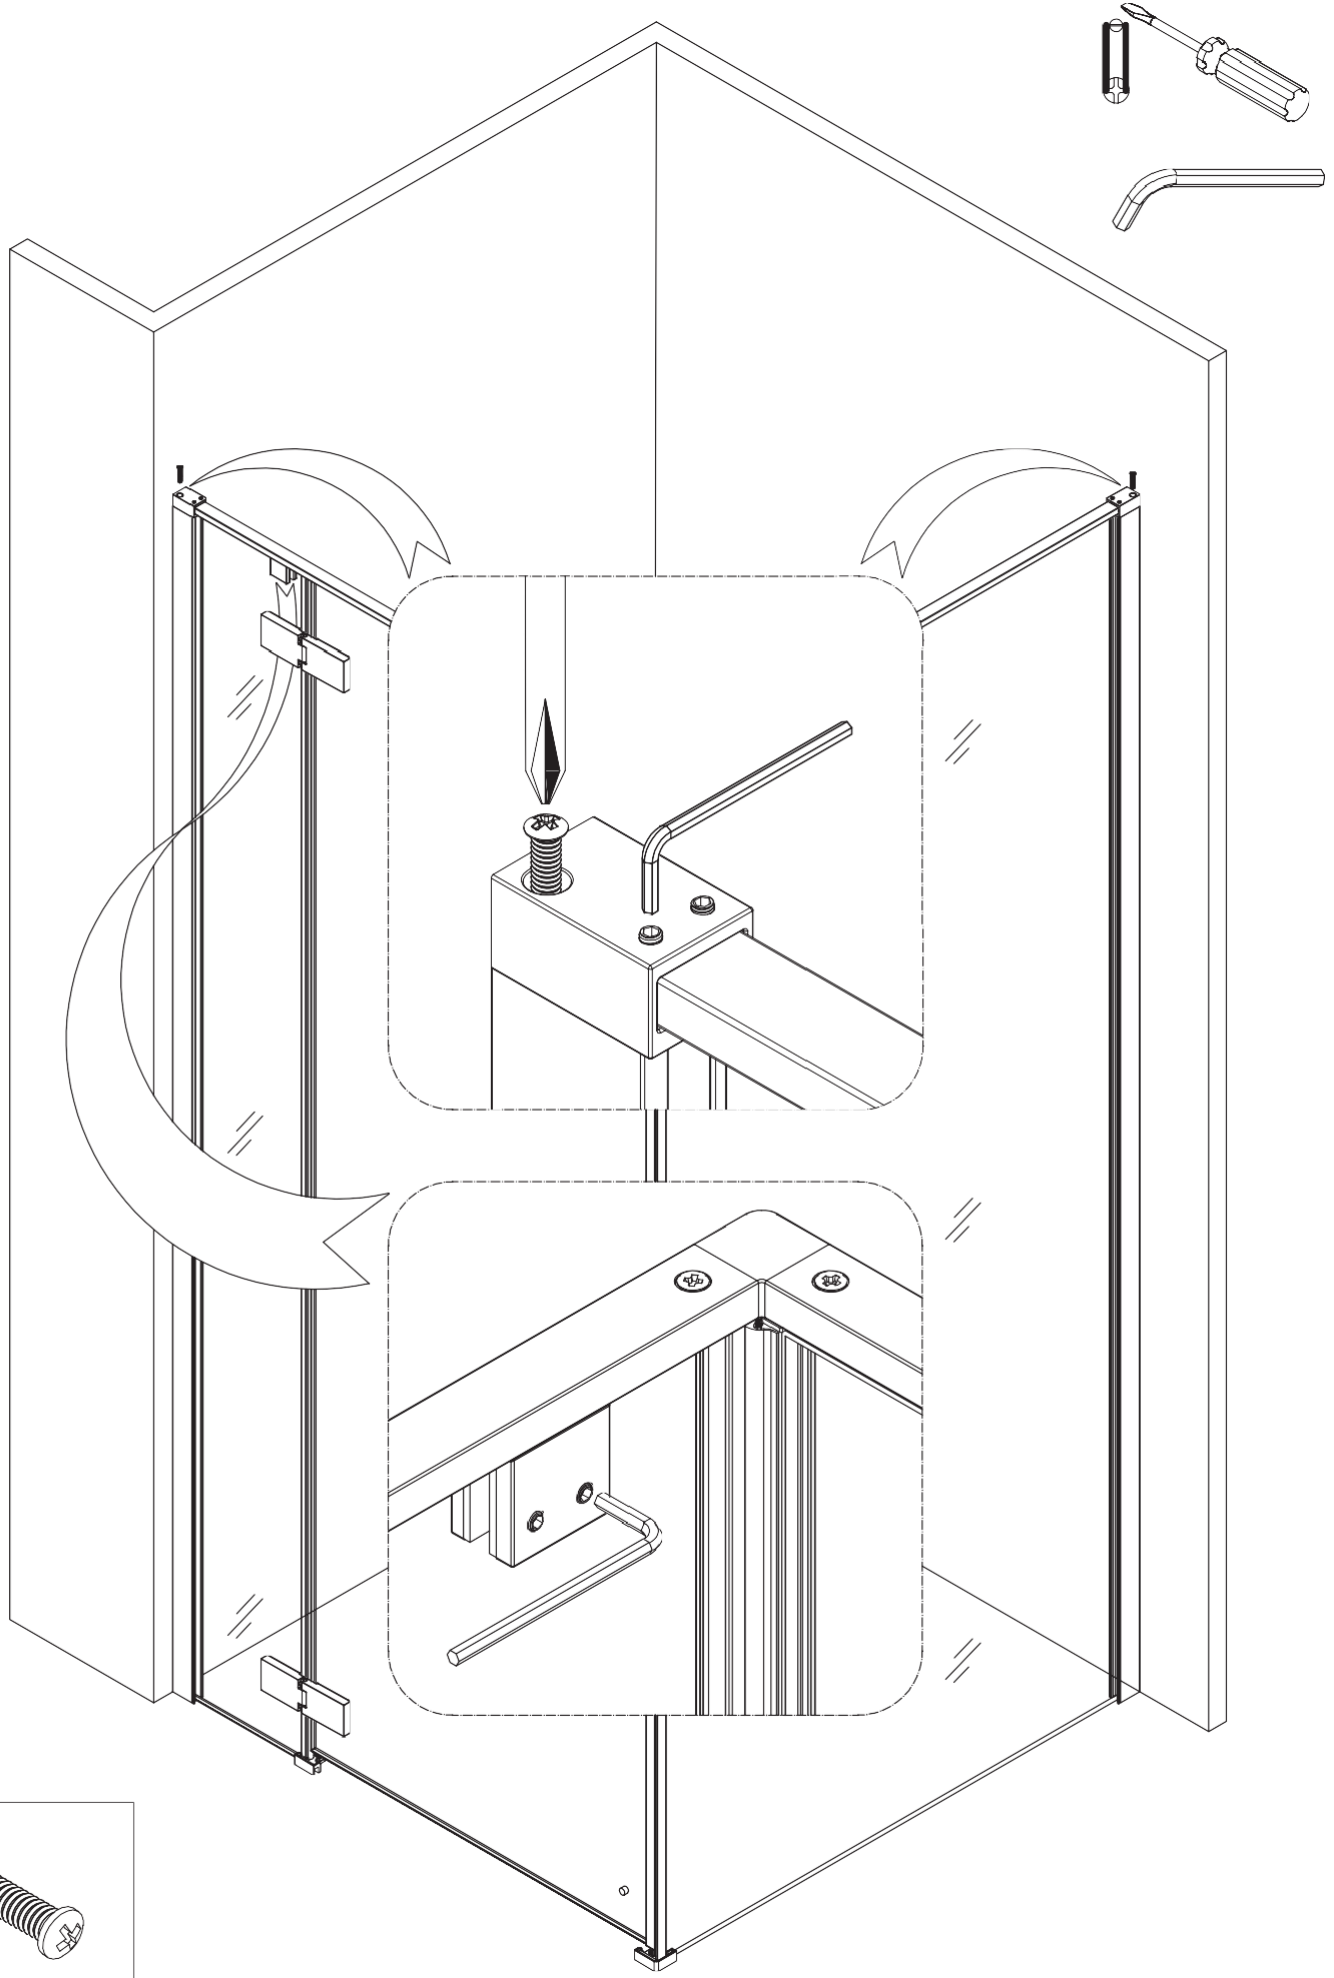

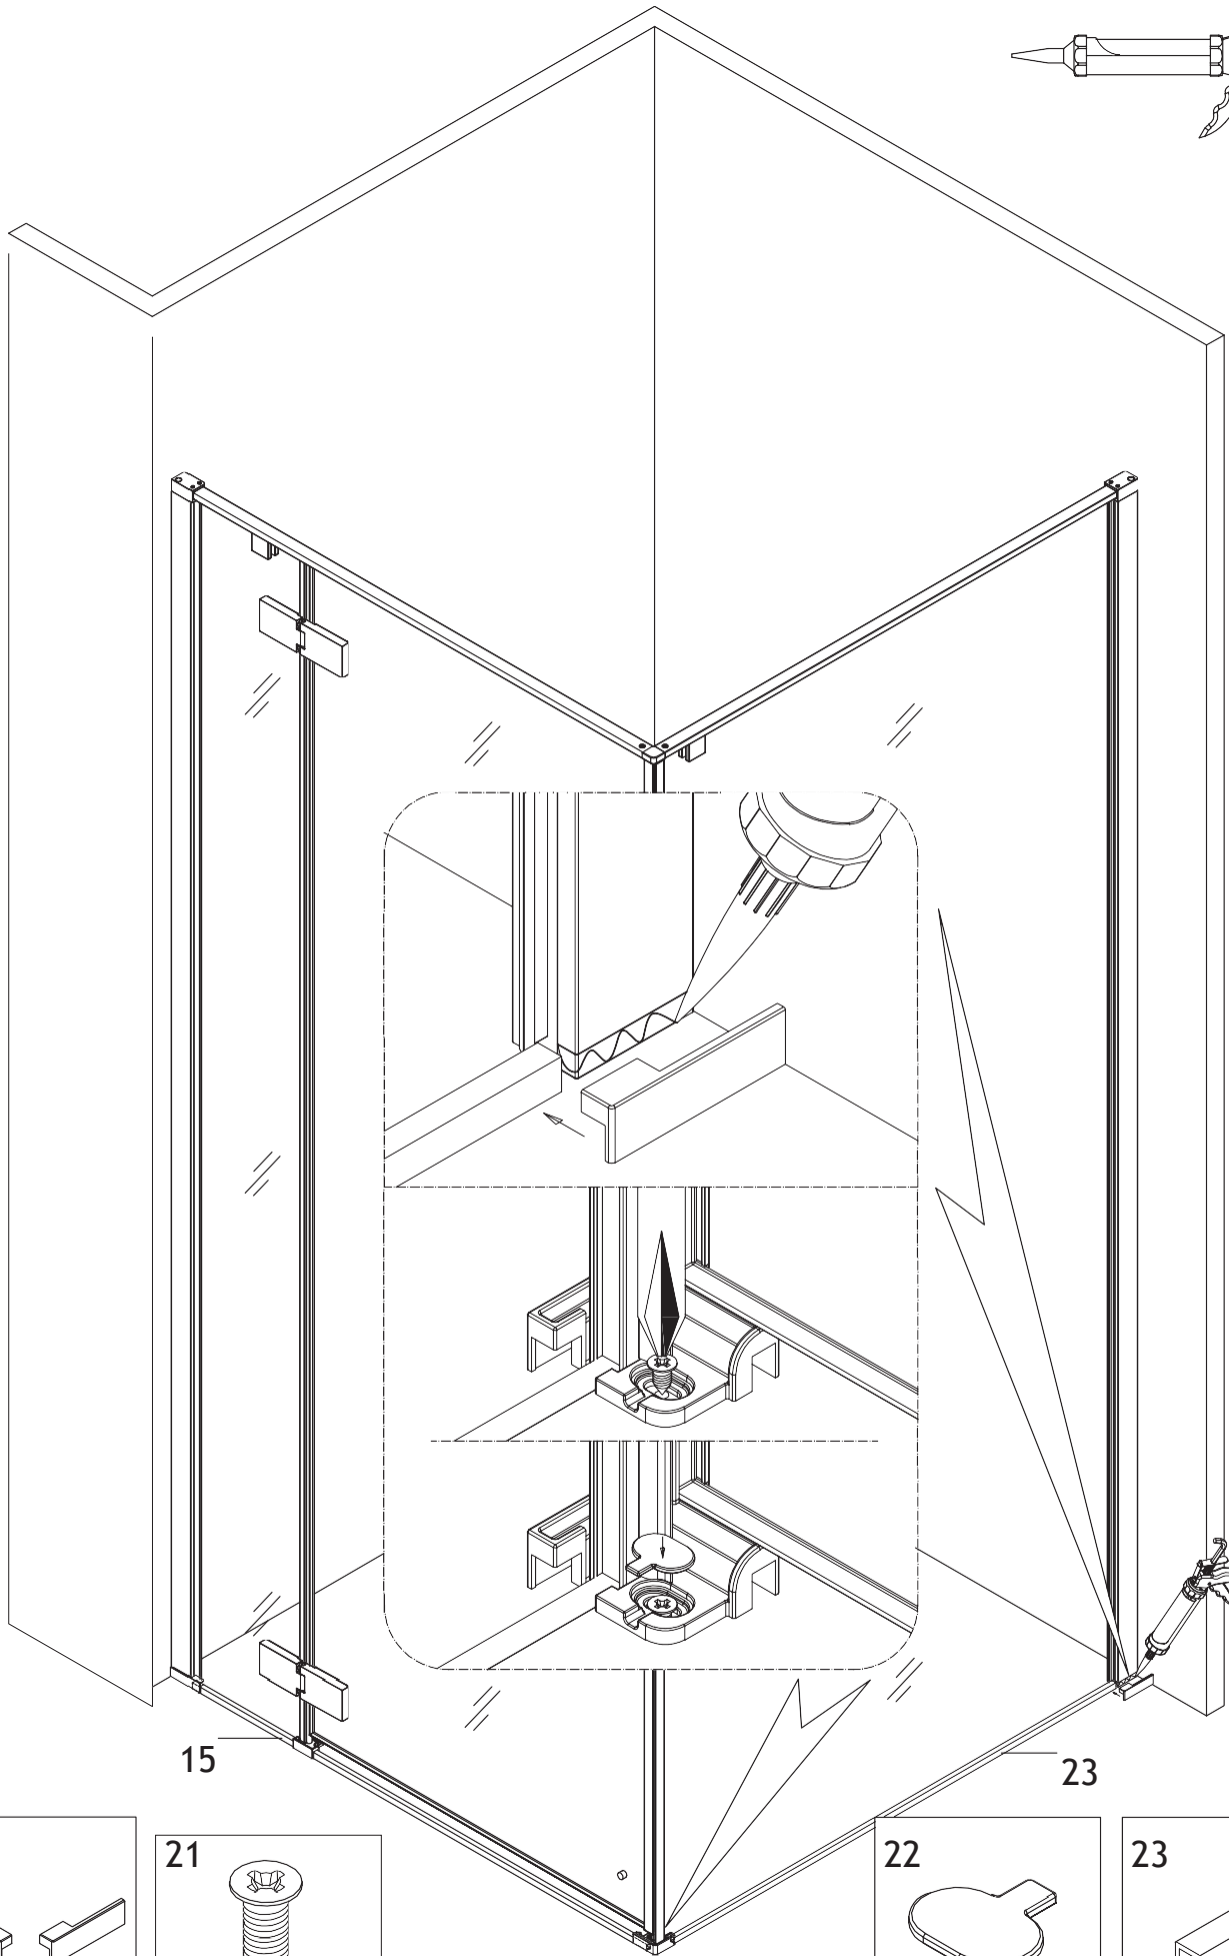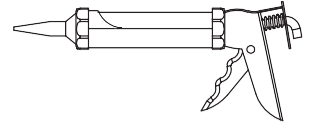

15

23

17

