




# INSTRUCȚIUNI DE INSTALARE

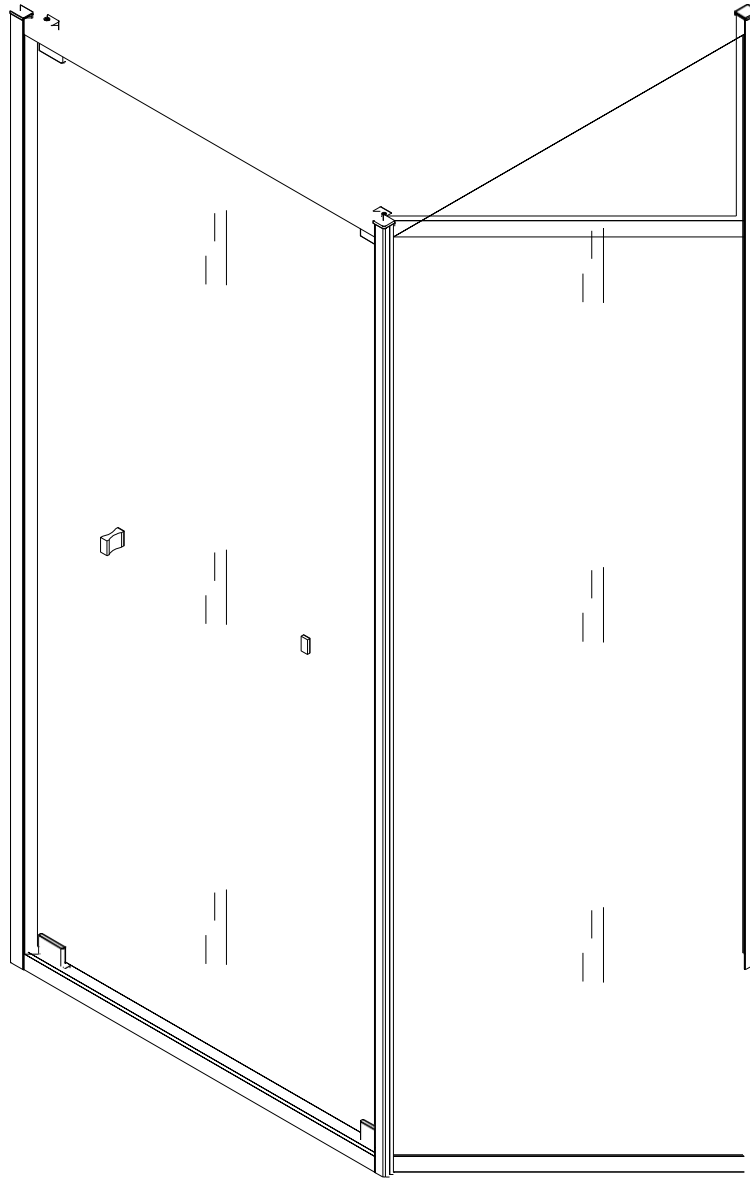


CABINĂ DE DUȘ

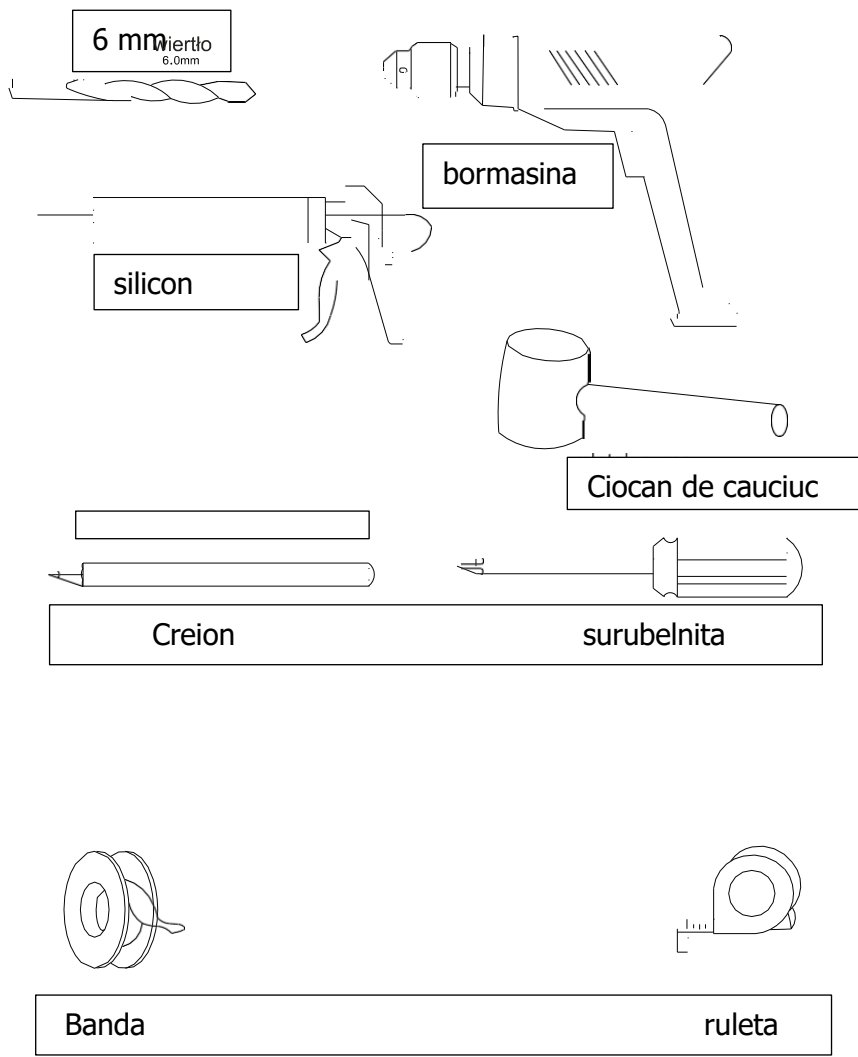


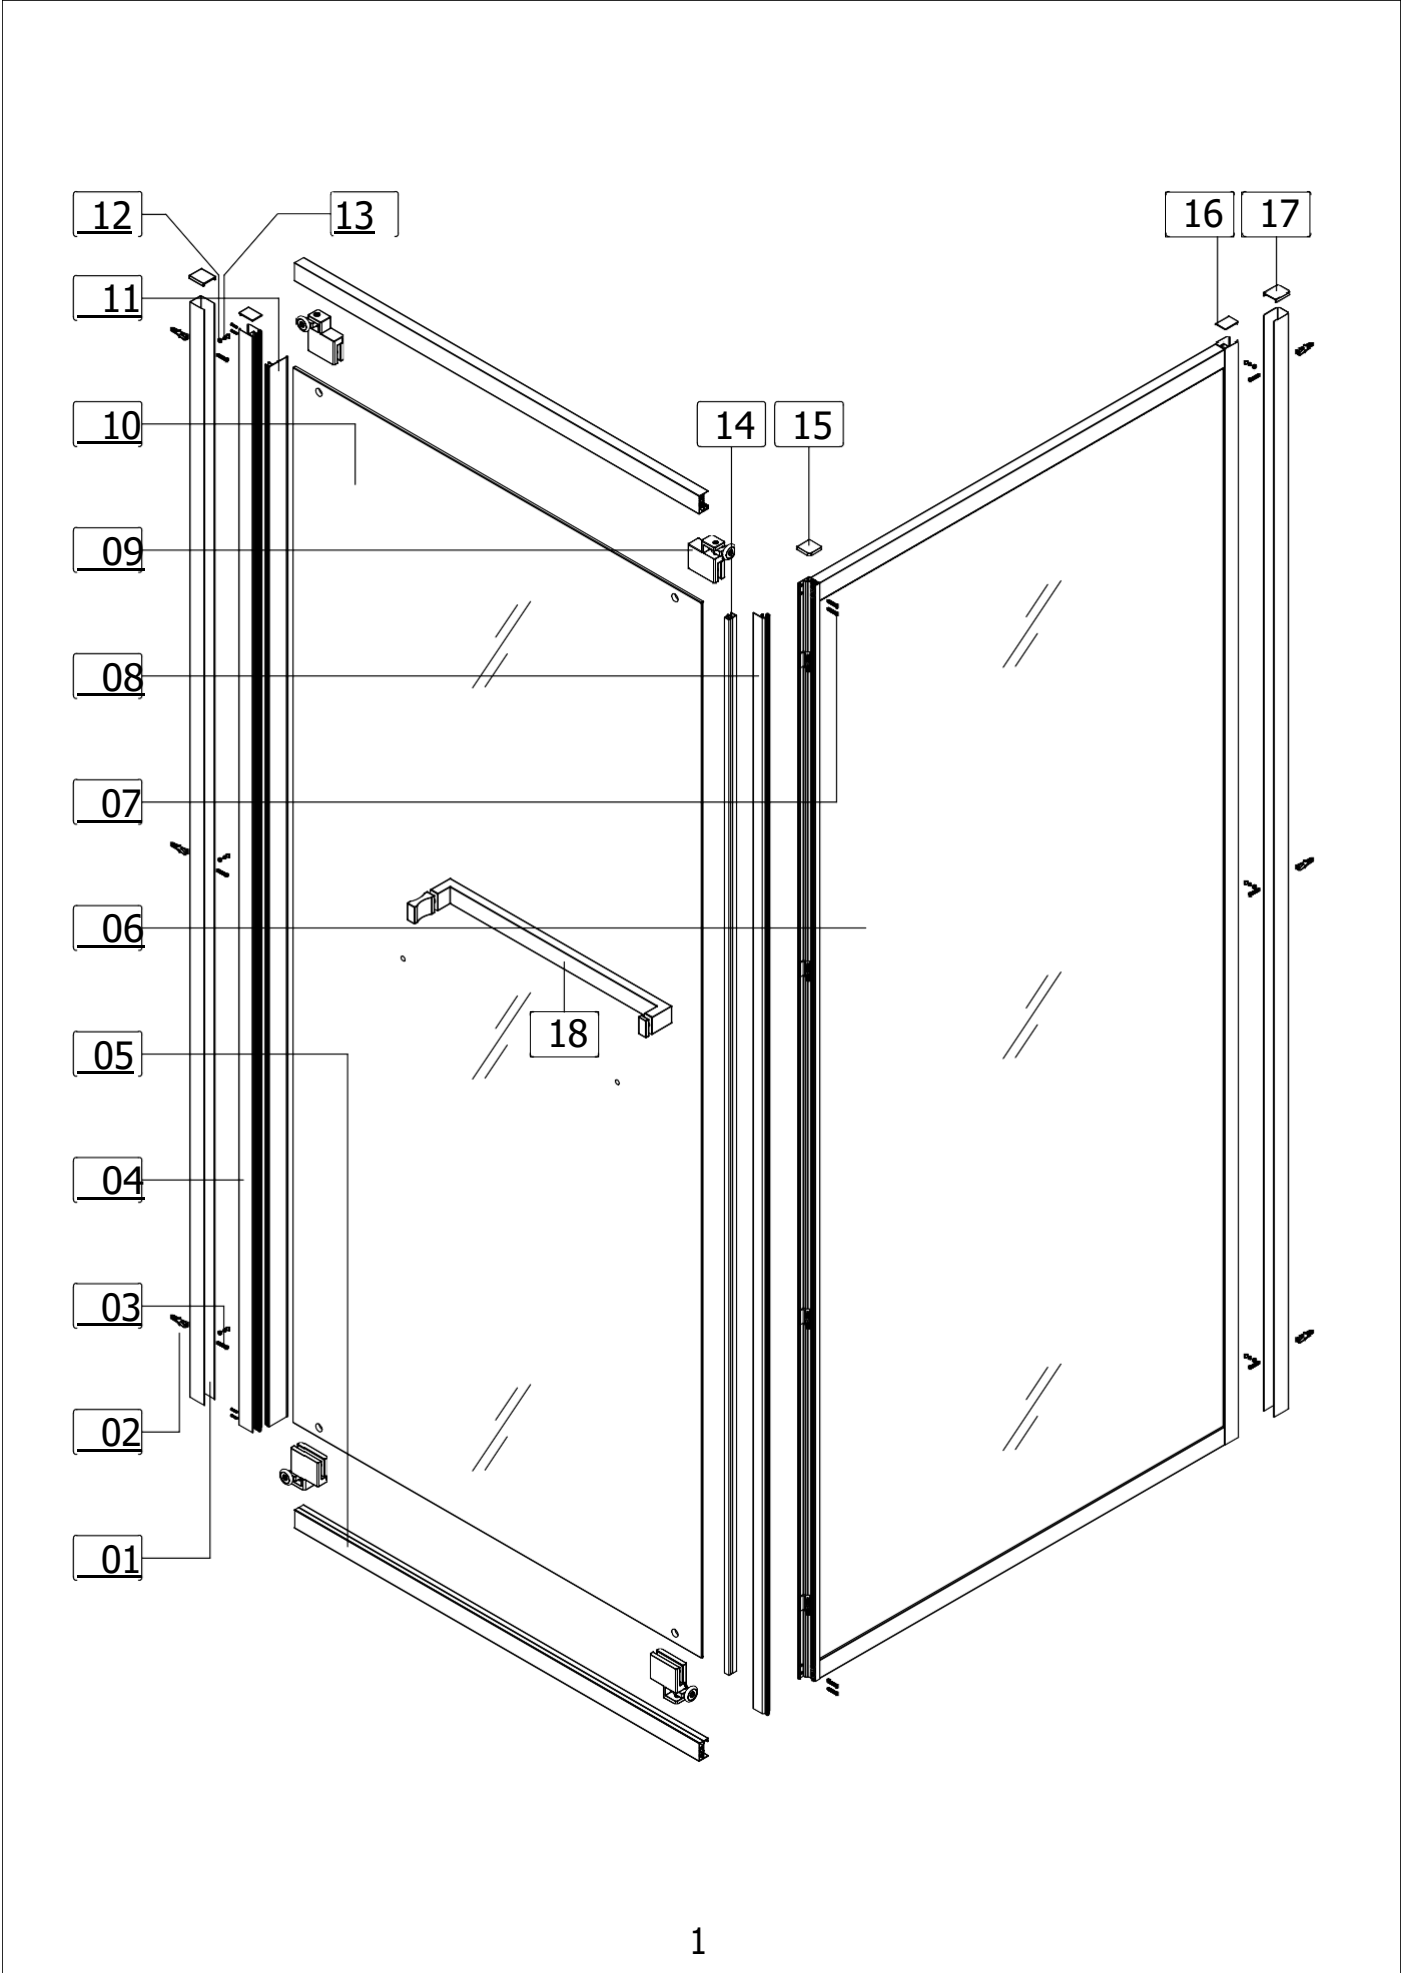

# INSTRUMENTE NECESARE

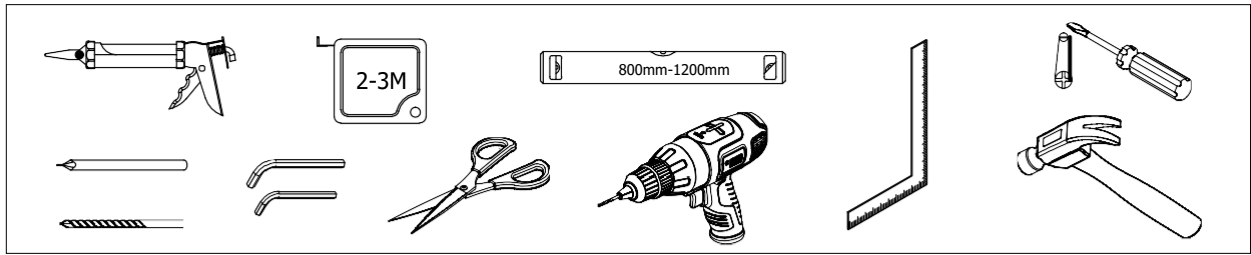


## TOATE PĂRȚILE

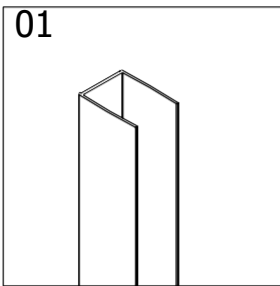


01

X2

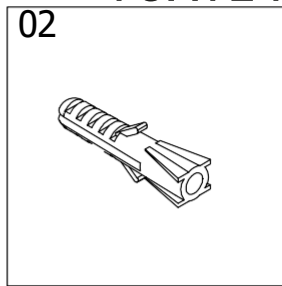


02

X6

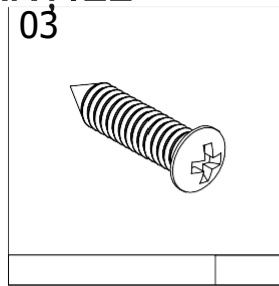


03

ST4.2 \* 32 X6

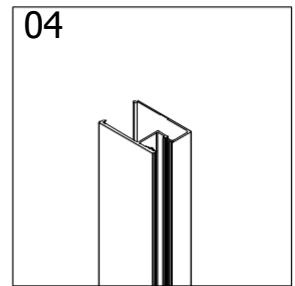


04

X1

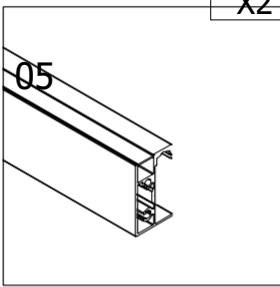


05

X2

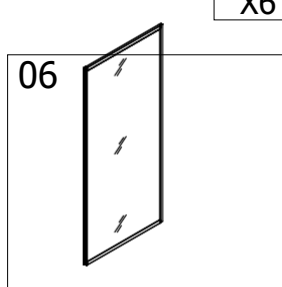


06

X8

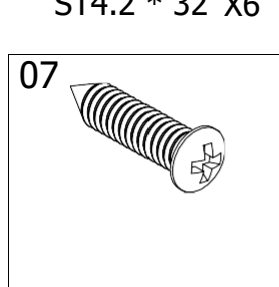


07

ST3.9 \* 25 X8

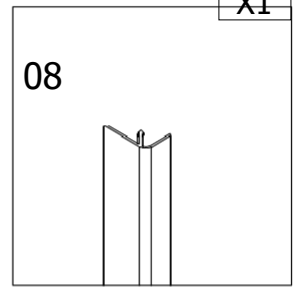


08

X1

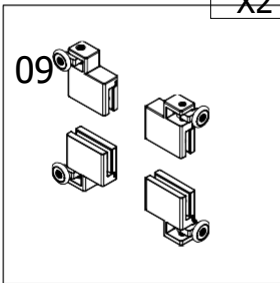


09

X4

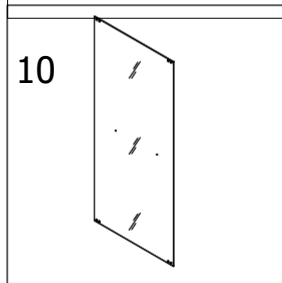


10

X1

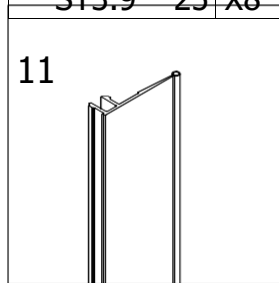


11

X1

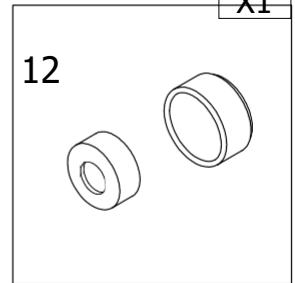


12

X6

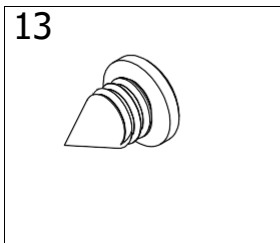


13

ST3.5 \* 9.5 X6

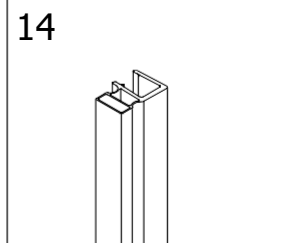


14

X1

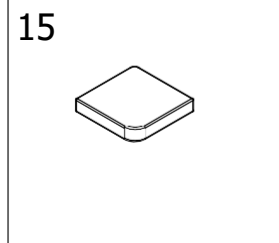


15

X1

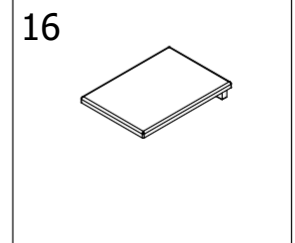


16

X2

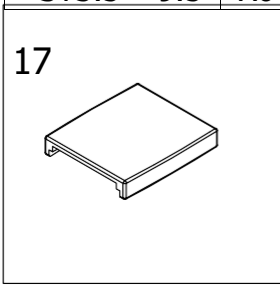

17

X2















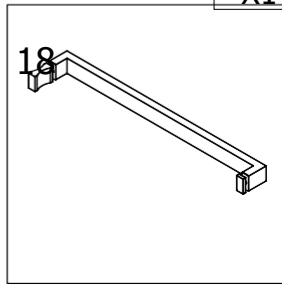


18

X1

Cu plăcere aminti o Măsurare Potrivit Distanțe Profil din Pereți.

90x90 - 885mm x 885mm  
80x100 - 785 mm x 985 mm

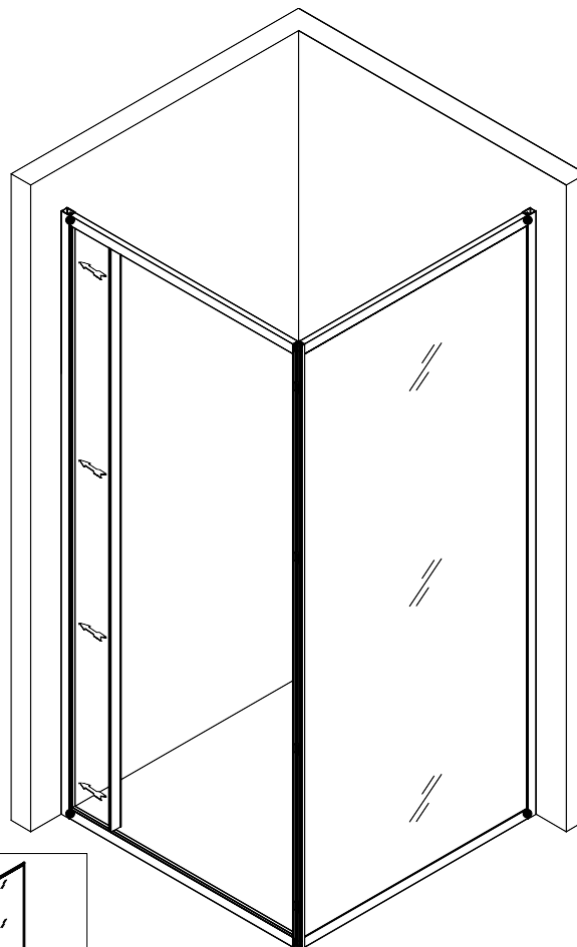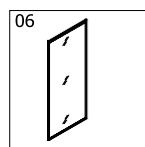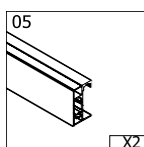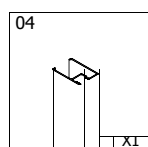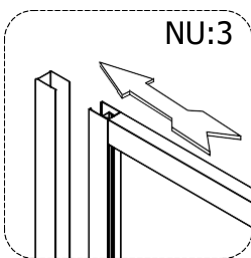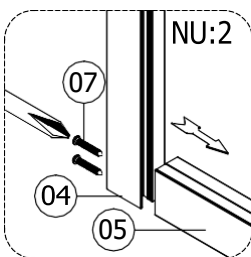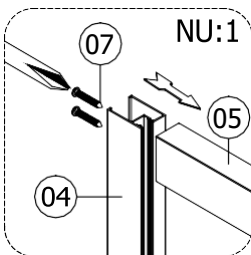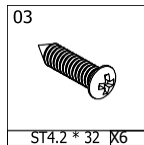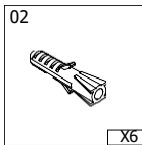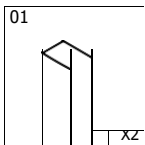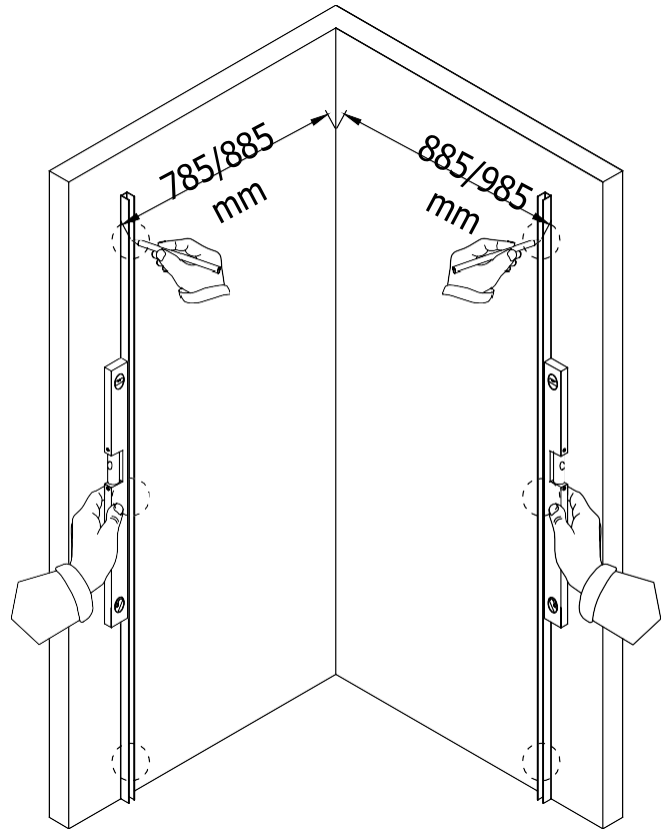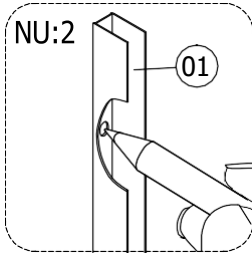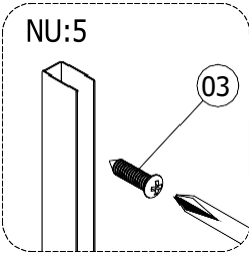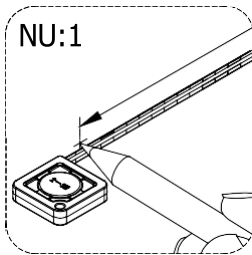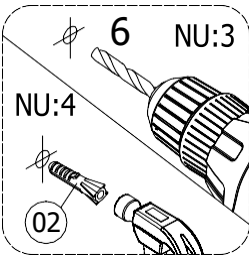

3

